

PARTS LIST No. D58713 00804

部 品 表
PARTS LIST

型 式
MODEL **DCW-480ESW**

 **デンヨー株式会社**
Denyo Co., Ltd.

適用製造番号
SERIAL No. 3831876~

HOW TO USE THE PARTS LIST

1. This parts list covers the parts for Engine Welder/Generator Model DCW-480ESW.
2. When placing orders, specify the following details:
 - 1) Model Number and Serial Number.
 - 2) Parts Number and Parts Name.
 - 3) Quantity required.
3. The parts listed with a serial number are new parts.
Please place an order with us after confirmation of serial number for machine at your side.
4. The sequence of this parts list is by machine structure. Each group of parts has an illustration on the first page of the parts list. Parts can be identified on the parts list, using the key number on the illustration. These key number, on the illustration, are also shown on the left-hand column in the parts list.
5. The parts number are shown as 10 digits and alphabet. The parts number of the parts makers are shown in the remark column.
6. The parts marked with an asterisk and the parts not listed are not available as a single part, and orders must be placed for them as an assembly.
7. This parts list uses the following abbreviations and symbols:

All	:Some parts differ from unit to unit	p.	:Page
Ass'y	:Assembly	Re.	:Rear
Fr.	:Front	R. H.	:Right
L. H.	:Left	STD	:Standard
No.	:Number	→	:Indication of the page where the modified or additional parts are listed.
O. P.	:Optional Parts		

 
Each symbol [A] [B] [C] listed in a part of Q'ty shows the appropriate parts number for the unit you purchased. The meaning of the symbol [A] [B] [C] is listed on the first top place of each assembly group.

Please check the specification of the unit such as frequency, voltage, model No. etc. before placing orders.


8. Left (L.H.) and Right (R.H.) used in this parts list show the direction when you look at the engine from the generator side.
9. For the engine parts not listed in this parts list, refer to "KUBOTA Corporation V1505 Diesel Engine Parts Catalogue".

I N D E X

Name	Page
Engine-Driven DC Welder/Generator Set.....	1 - 1
Generator Ass'y.....	2 - 1
Control Panel Ass'y.....	3 - 1
Electric Parts Ass'y (Part 1).....	4 - 1
Electric Parts Ass'y (Part 2).....	5 - 1
Engine & Radiator Ass'y.....	6 - 1
Battery Ass'y.....	7 - 1
Muffler Ass'y.....	8 - 1
Fuel Tank Ass'y.....	9 - 1
Bonnet Ass'y (Part 1).....	10 - 1
Bonnet Ass'y (Part 2).....	11 - 1
Name Plate Ass'y.....	12 - 1

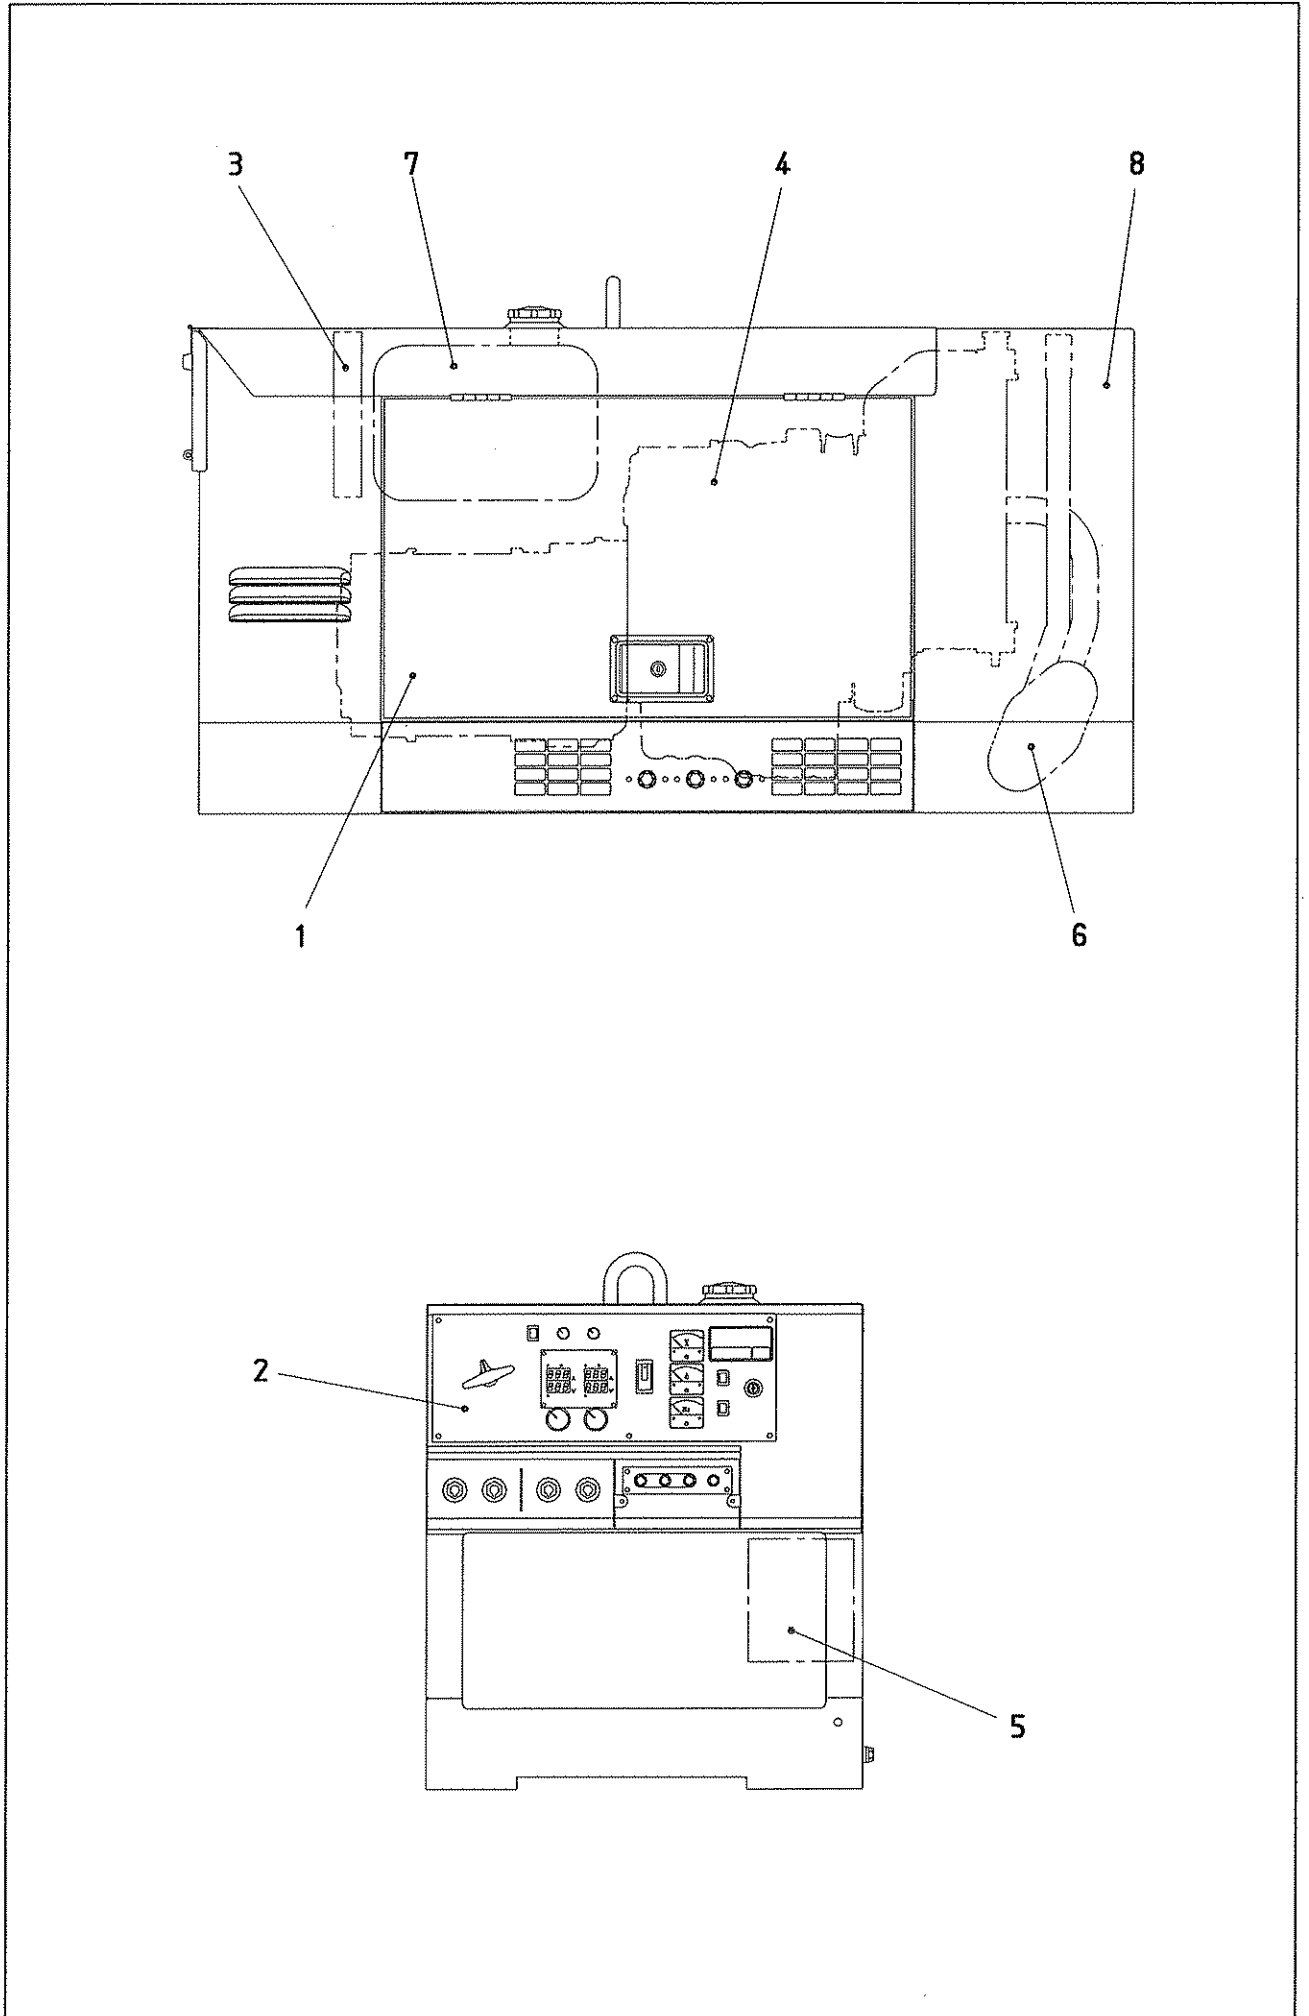


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1		Generator Ass'y	Refer to p.2-1						
2		Control Panel Ass'y	Refer to p.3-1						
3		Electric Parts Ass'y (Parts 1)	Refer to p.4-1						
		Electric Parts Ass'y (Parts 2)	Refer to p.5-1						
4		Engine & Radiator Ass'y	Refer to p.6-1						
5		Battery Ass'y	Refer to p.7-1						
6		Muffler Ass'y	Refer to p.8-1						
7		Fuel Tank Ass'y	Refer to p.9-1						
8		Bonnet Ass'y (Part 1)	Refer to p.10-1						
		Bonnet Ass'y (Part 2)	Refer to p.11-1						
		Name Plate Ass'y	Refer to p.12-1						
	D 62411 00702	Generator Wiring Diagram	(Japanese)						
	D 68140 00703	Generator Wiring Diagram	(English)						
	D 63580 00303	Engine Wiring Diagram	(Japanese)						
	D 68141 00403	Engine Wiring Diagram	(English)						
	D 68443 00104	Instruction Manual							

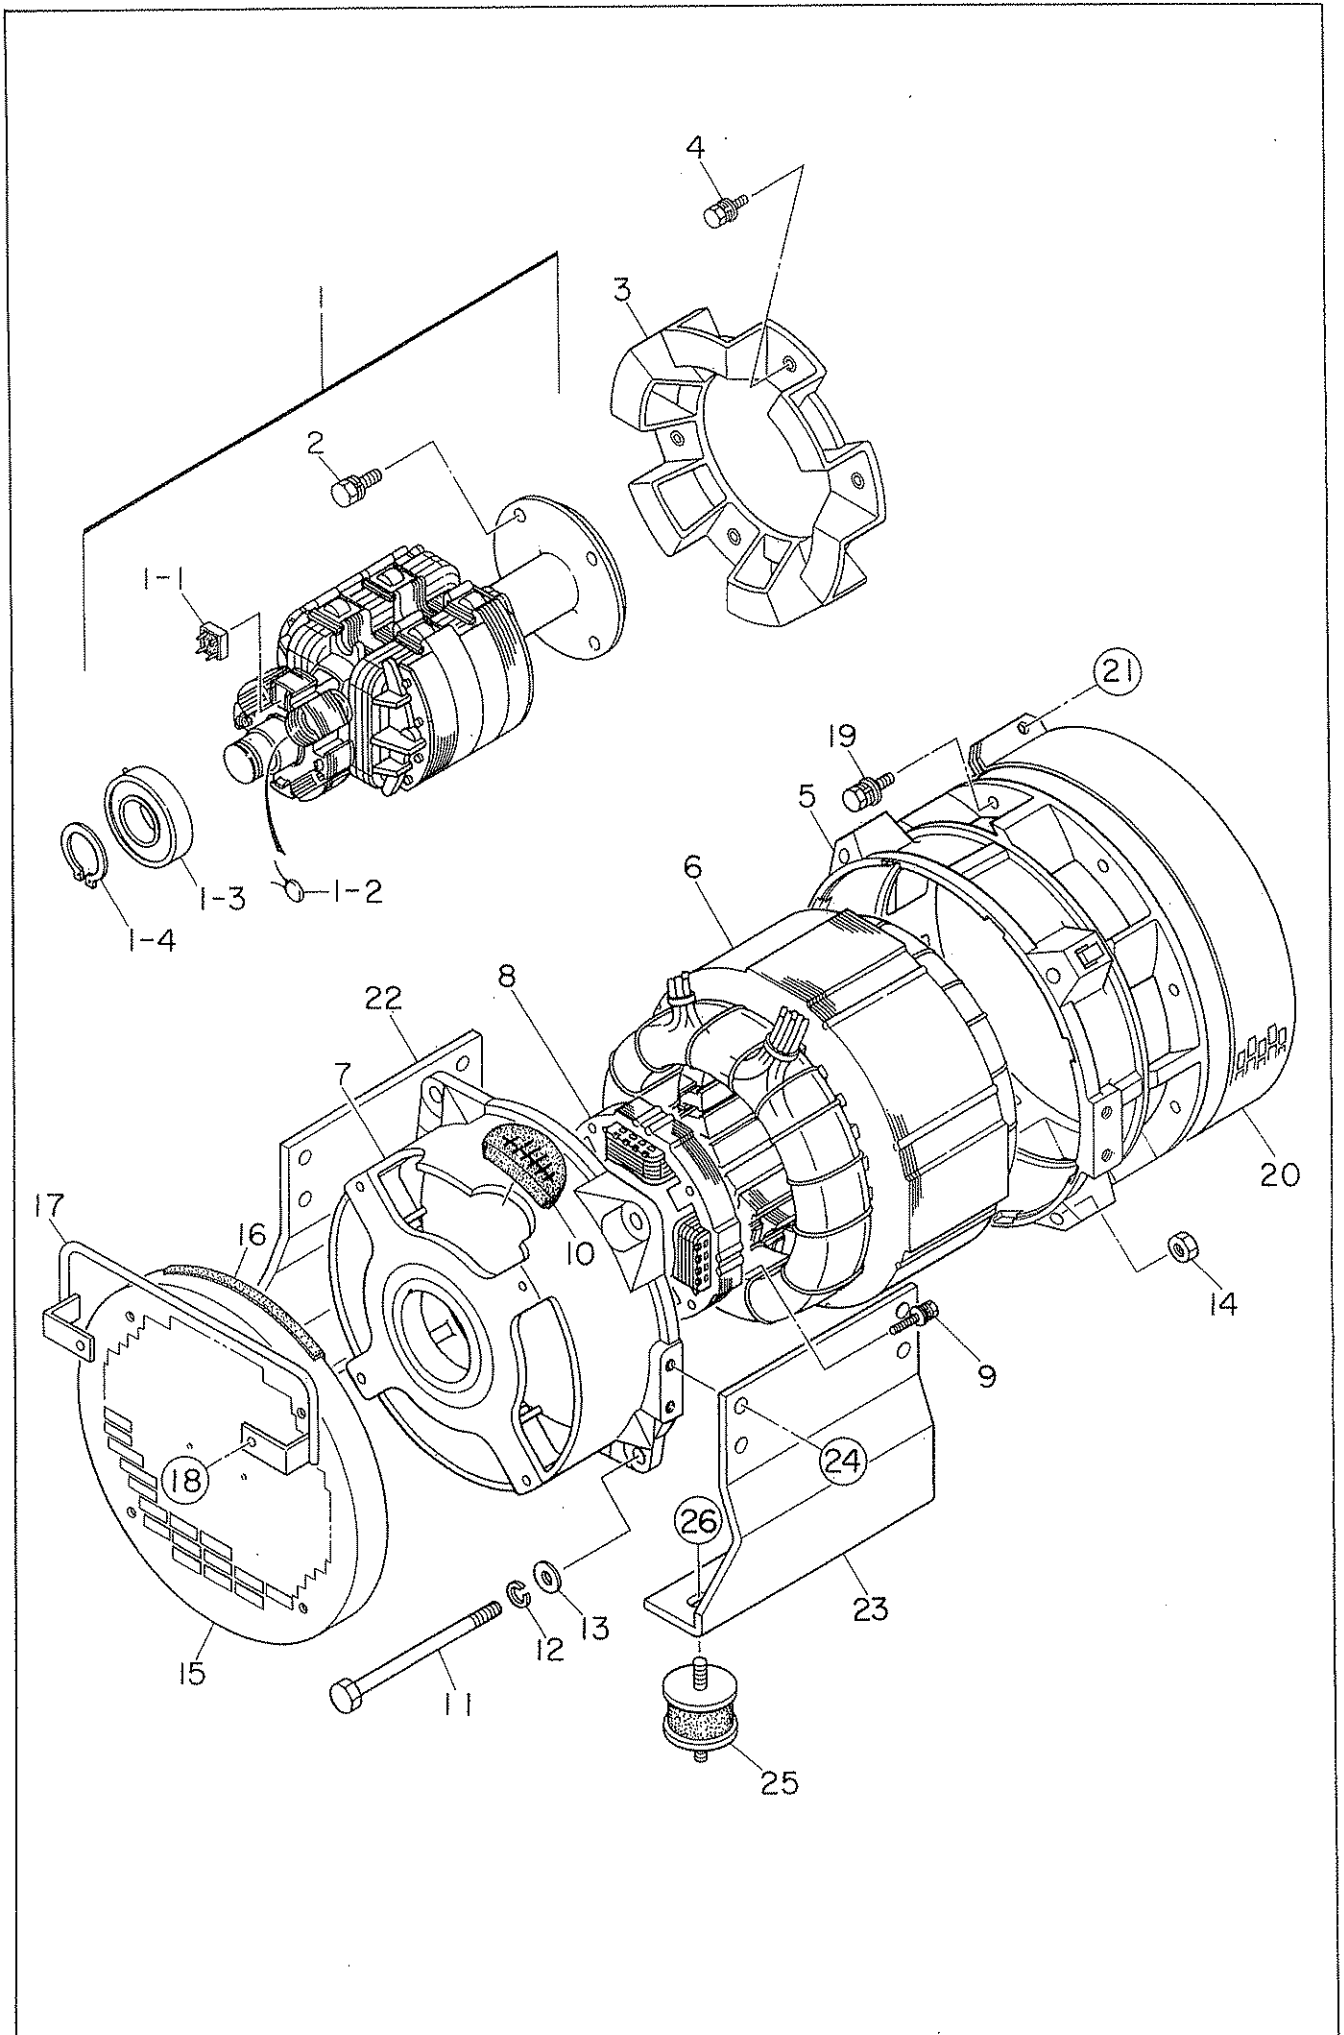 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 41100 00403	Rotor Ass'y		1					
1- 1	Y 06018 20037	Rectifier	S10VB60	(1)					
1- 2	Y 06018 22638	Surge Absorber	TNR15G 431K	(1)					
1- 3	Y 00712 06307	Bearing	6307DDU G3	(1)					
1- 4	Y 00800 00035	Snap Ring		(1)					
2	Y 00124 10030	Hex. Head Bolt		4					
3	D 41111 00103	Fan		1					
4	Y 00171 08025	Hex. Head Bolt		6					
5	W 78113 15102	End Bracket		1					
6	D 51350 00603	Armature Ass'y		1					
7	D 41530 00202	End Bracket		1					
8	D 41390 00003	Field Ass'y, exciter		1					
9	Y 00171 05035	Hex. Head Bolt		4					
10	D 41534 00403	Grommet		1					
11	D 41315 00004	Set Bolt		4					
12	Y 00400 12000	Spring Washer		4					
13	Y 00412 12000	Plain Washer		4					
14	Y 00300 12000	Hex. Nut		4					
15	B 01313 00104	Cover		1					
16	Y 02269 00200	Rubber Seal		1					
17	D 41853 00104	Bracket		1					
18	Y 00171 08035	Hex. Head Bolt		4					
19	Y 00124 10025	Hex. Head Bolt		8					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
20	D 41554 00104	Cover, fan		1					
21	Y 00171 06040	Hex. Head Bolt		1					
	Y 00379 06000	U Nut		1					
22	D 51321 00103	Generator Foot		1					
23	D 51321 00003	Generator Foot		1					
24	Y 00123 10025	Hex. Head Bolt		8					
25	W 76054 19004	Rubber Suspension		2					
26	Y 02070 10000	Hex. Nut		2					

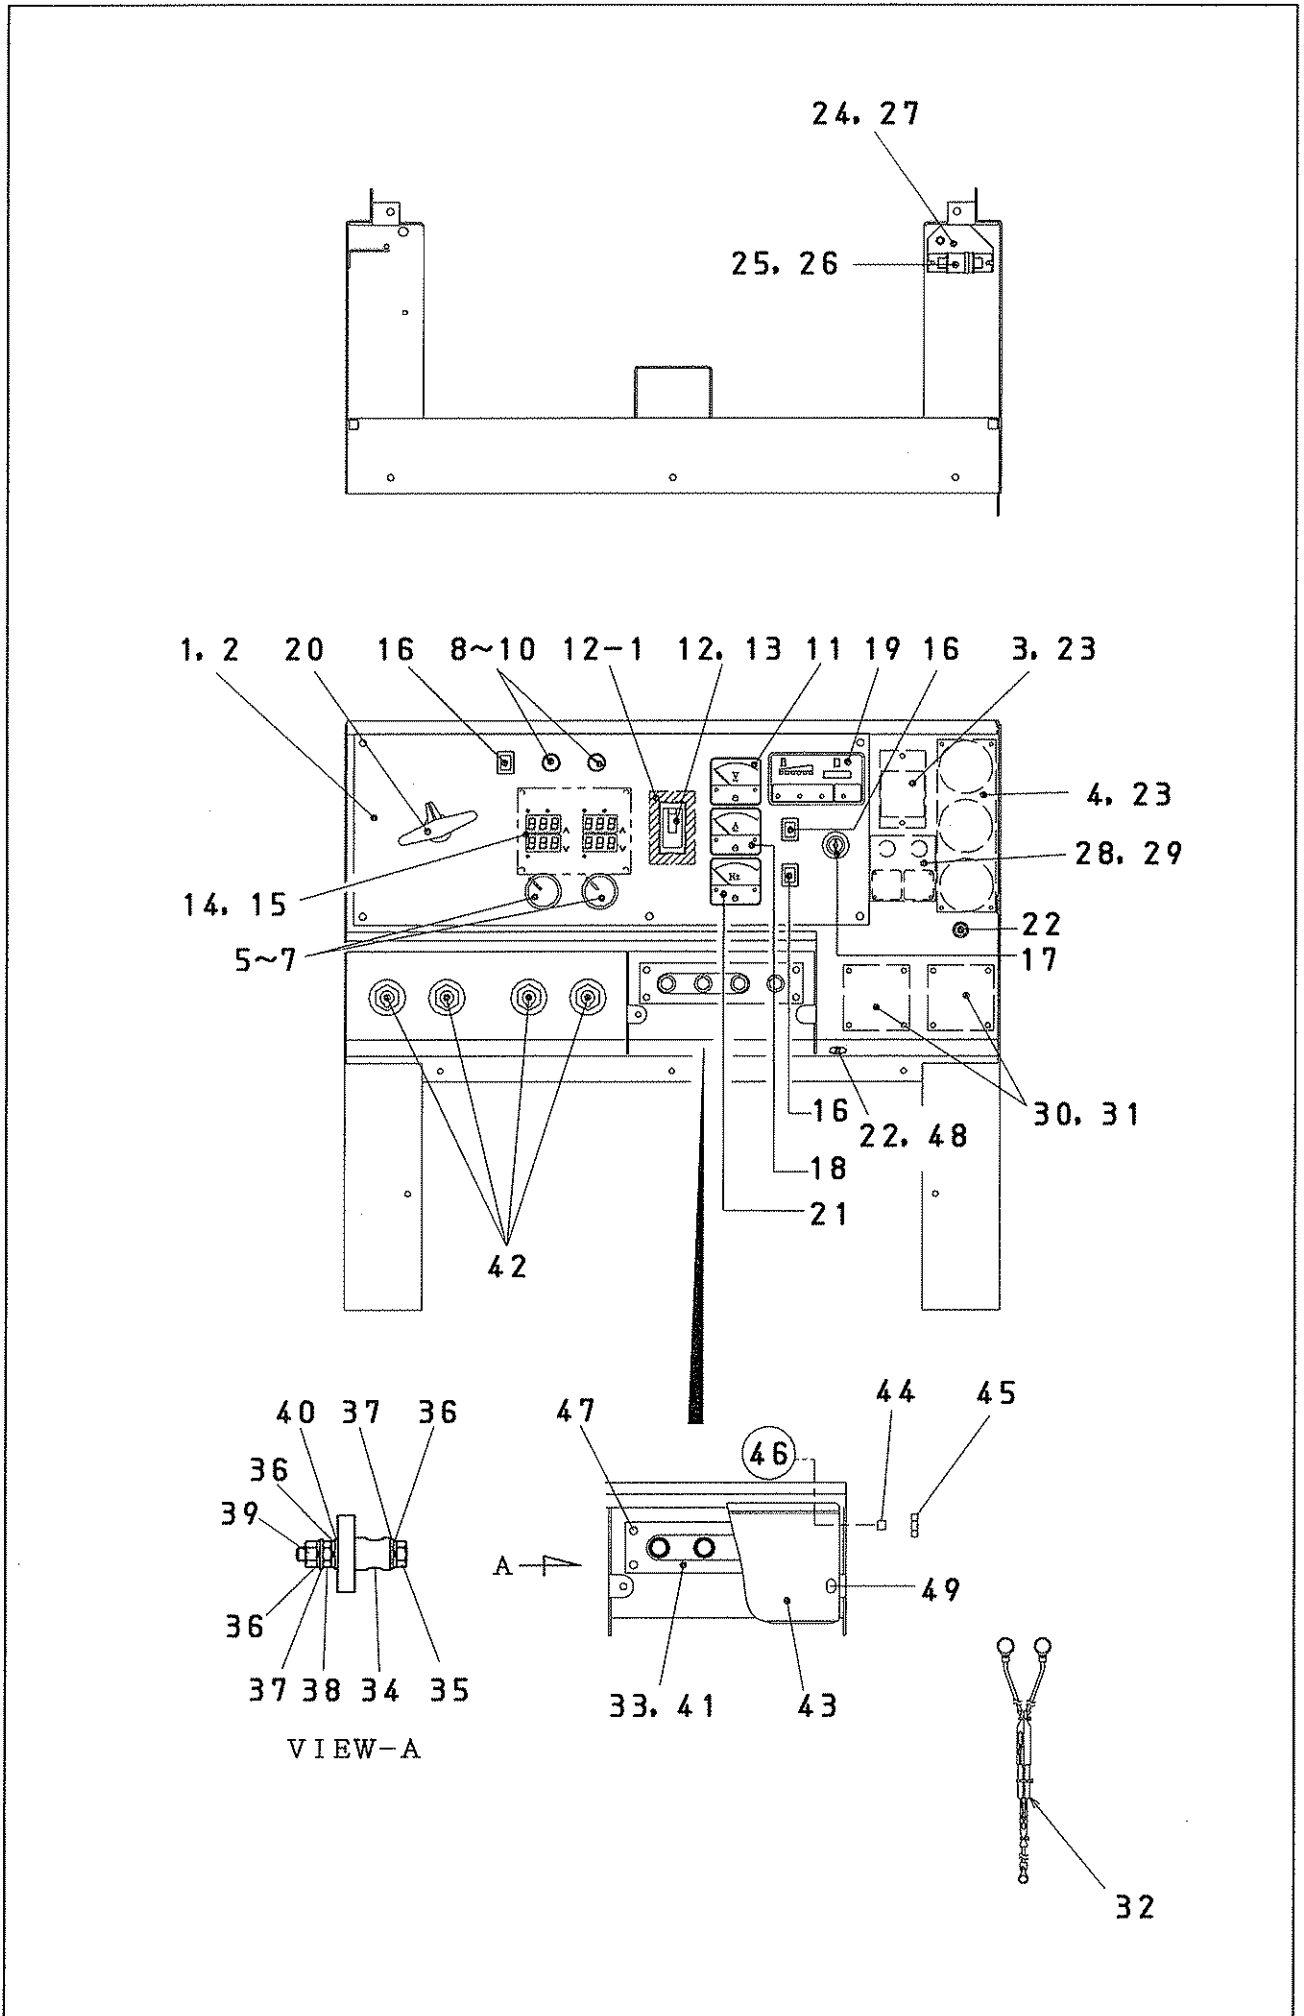 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 65113 00402	Control Panel	D62240 00303	1					
2	Y 00218 06030	Machine Screw		6					
3	W 08418 05804	Cover		1					
4	D 62618 00004	Cover		1					
5	Y 06018 40028	Rheostat (Current/Voltage Regulator)	RV24YN20SB 500Ω	2				VR1A, B	
6	Y 06018 40103	Knob	K-2195	2					
7	W 08018 83003	Insulator		2					
8	Y 06018 40095	Rheostat (Arc Force Regulator)	RV24YN20SB 2kΩ	2				VR2A, B	
9	Y 06018 40170	Knob	K-2195	2					
10	W 08018 83003	Insulator		2					
11	Y 06018 00285	AC Voltmeter	SCF-5A 600V	1				V	
12	Y 06018 71790	Circuit Breaker	XE-50NB 3P 23A	1				CB	
12- 1	B 34914 00004	Rubber Seal		1					
13	Y 00271 04035	Machine Screw		2					
14	D 99248 00154	Digital Monitor	DM-50A	1				DM-50A	
15	Y 00271 03006	Machine Screw		4					
16	Y 06018 31600	Rocker Switch	JW-M11RKK	3				SW2~4	
17	Y 06021 00059	Starter Switch	KUBOTA 37410-59113	1					
18	Y 06018 05749	AC Ammeter	ACF-5 0-30A	1				A	
19	Y 06021 15042	Engine Monitor	MT-15	1					
20	Y 06018 03076	Change-Over Switch	SK-2532 MSA-2	1				SW1	
21	Y 06018 00455	Frequency Meter	FCF-5 240V	1				F	
22	Y 00169 08020	Hex. Head Bolt		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
23	Y 00218 04012	Machine Screw		6					
24	D 52618 00104	Bracket		1					
25	Y 06018 04211	Current Transformer	MCT-100Y	1				CT	
26	Y 00271 04010	Machine Screw		2					
27	Y 00169 06015	Hex. Head Bolt		1					
28	D 62618 00104	Cover		1					
29	Y 00218 03012	Machine Screw		4					
30	D 62618 00204	Cover		2					
31	Y 00218 05012	Machine Screw		8					
32	D 42683 04704	Noise Filter		2				C3~C6	
33	W 87018 60004	Set Board, output terminal		1					
34	W 78118 61004	Output Terminal		4					
35	W 08018 30604	Hex. Head Bolt		4					
36	Y 00400 08000	Spring Washer		12					
37	Y 00414 08000	Plain Washer		8					
38	Y 00395 08000	Hex. Nut		4					
39	Y 00300 08000	Hex. Nut		4					
40	Y 00412 08000	Plain Washer		4					
41	W 87018 64004	Rubber Seal		1					
42	Y 06018 15191	Output Terminal, welding		4					
43	D 62371 00003	Cover, output terminal		1					
	D 62374 00004	Rubber Seal		1					
44	W 08218 00014	Collar		2					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
45	D 93112 00004	Stay Rubber		1					
46	Y 00169 06020	Hex. Head Bolt		2					
	Y 02070 06000	Hex. Nut		2					
47	Y 00169 06030	Hex. Head Bolt		4					
48	Y 02070 08000	Hex. Nut		1					
49	Y 00169 06015	Hex. Head Bolt		2					

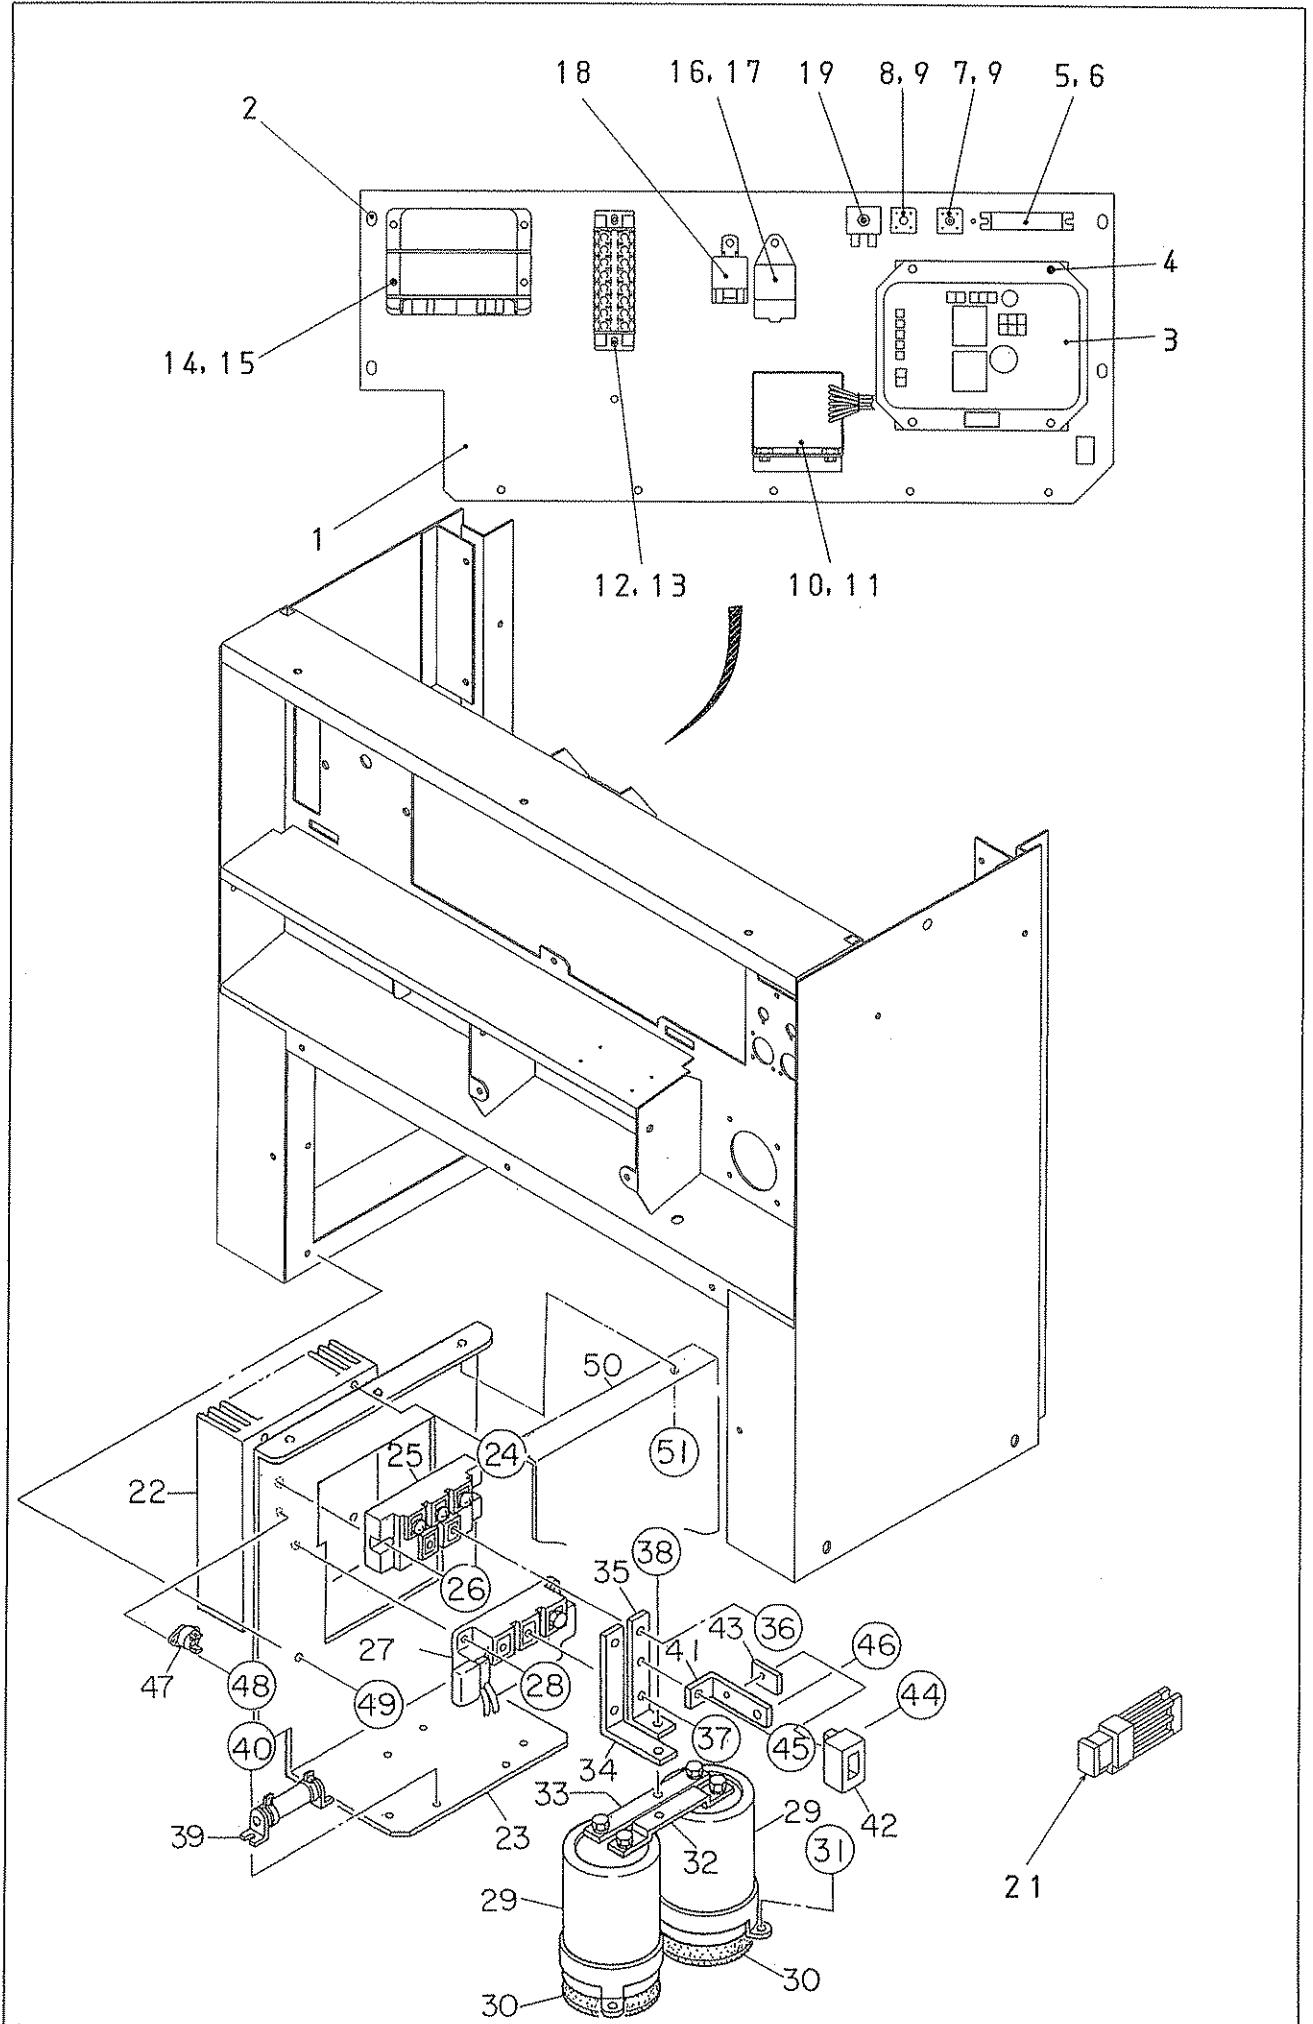 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 62615 00203	Set Panel, electric parts		1					
	Y 03149 00660	Rubber Seal		1					
2	Y 00169 06015	Hex. Head Bolt		4					
3	Y 06018 20662	Automatic Voltage Regulator	AN-5W-203	1				AVR	
4	Y 00171 05015	Hex. Head Bolt		4					
5	Y 06018 42347	Resistor	GG20W 30Ω	1				R2	
6	Y 00271 04016	Machine Screw		2					
7	Y 06018 20037	Rectifier	S10VB60	1				Re2	
8	Y 06018 23204	Rectifier	S5VB60	1				Re3	
9	Y 00271 03016	Machine Screw		2					
10	Y 06018 23857	Slow Down Unit	NC-73	1				RC	
11	Y 00272 05016	Machine Screw		2					
12	Y 06018 15422	Terminal Board	KT20 8P	1					
13	Y 00271 04020	Machine Screw		2					
14	Y 06022 00475	Emergency Unit	KUBOTA 17472-60605	1					
15	Y 00271 05025	Machine Screw		4					
16	Y 06022 01273	Lamp Timer	KUBOTA 15694-65992	1					
17	Y 00271 05016	Machine Screw		1					
18	Y 06018 24525	Relay	AGA2213-5.6 DC12V	1				Ry	
	Y 00271 05010	Machine Screw		1					
19	Y 06018 23240	Rectifier	DE45 300V SA9905-6	1				Re4	
	Y 00271 04016	Machine Screw		1					
21	Y 06018 06640	Fuse	65A	1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
22	D 62673 00904	Cooling Fin		2					
23	D 62616 00304	Bracket		2					
24	Y 00169 06015	Hex. Head Bolt		8					
25	Y 06018 23256	Rectifier	DF-200BA-80	2				Re1A, B	
26	Y 00271 05016	Machine Screw		4					
27	D 42680 00403	IGBT Module Ass'y		2					
28	Y 00271 05016	Machine Screw		8					
29	Y 06018 26146	Condenser	LNT2C103MSMB 160V 10000 μ F	4				C1A, B C2A, B	
30	D 52618 00404	Insulator Rubber		4					
31	Y 00271 04010	Machine Screw		8					
32	D 42683 04204	Connection Plate		2					
33	D 42683 04304	Connection Plate		2					
34	D 52673 00404	Connection Plate		2					
35	D 52673 00304	Connection Plate		2					
36	Y 00271 05016	Machine Screw		4					
37	Y 00178 06014	Hex. Head Bolt		6					
38	Y 00171 06020	Hex. Head Bolt		4					
	Y 02072 06000	Hex. Nut		4					
39	Y 06018 42262	Resistor	GG20W 1k Ω	2				R1A, B	
40	Y 00271 04010	Machine Screw		4					
41	D 32673 00604	Connection Plate		2					
42	Y 06018 04202	DC Current Transformer	200A4V L03S200D15	2				DCCTA, B	
43	D 42354 00004	Insulator		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
44	Y 00271 04020	Machine Screw		2					
45	Y 00190 08016	Hex. Head Bolt		2					
	Y 00400 08000	Spring Washer		2					
	Y 00427 08000	Plain Washer		2					
46	Y 00190 08016	Hex. Head Bolt		2					
	Y 00400 08000	Spring Washer		2					
	Y 00427 08000	Plain Washer		2					
47	Y 06018 31056	Thermal Switch	US-602SYTFAS 90°C	2				THA, B	
48	Y 00210 03010	Machine Screw		4					
49	Y 00169 06015	Hex. Head Bolt		14					
50	D 62617 00004	Cover, electric parts		2					
51	Y 06050 11412	Rivet		8					

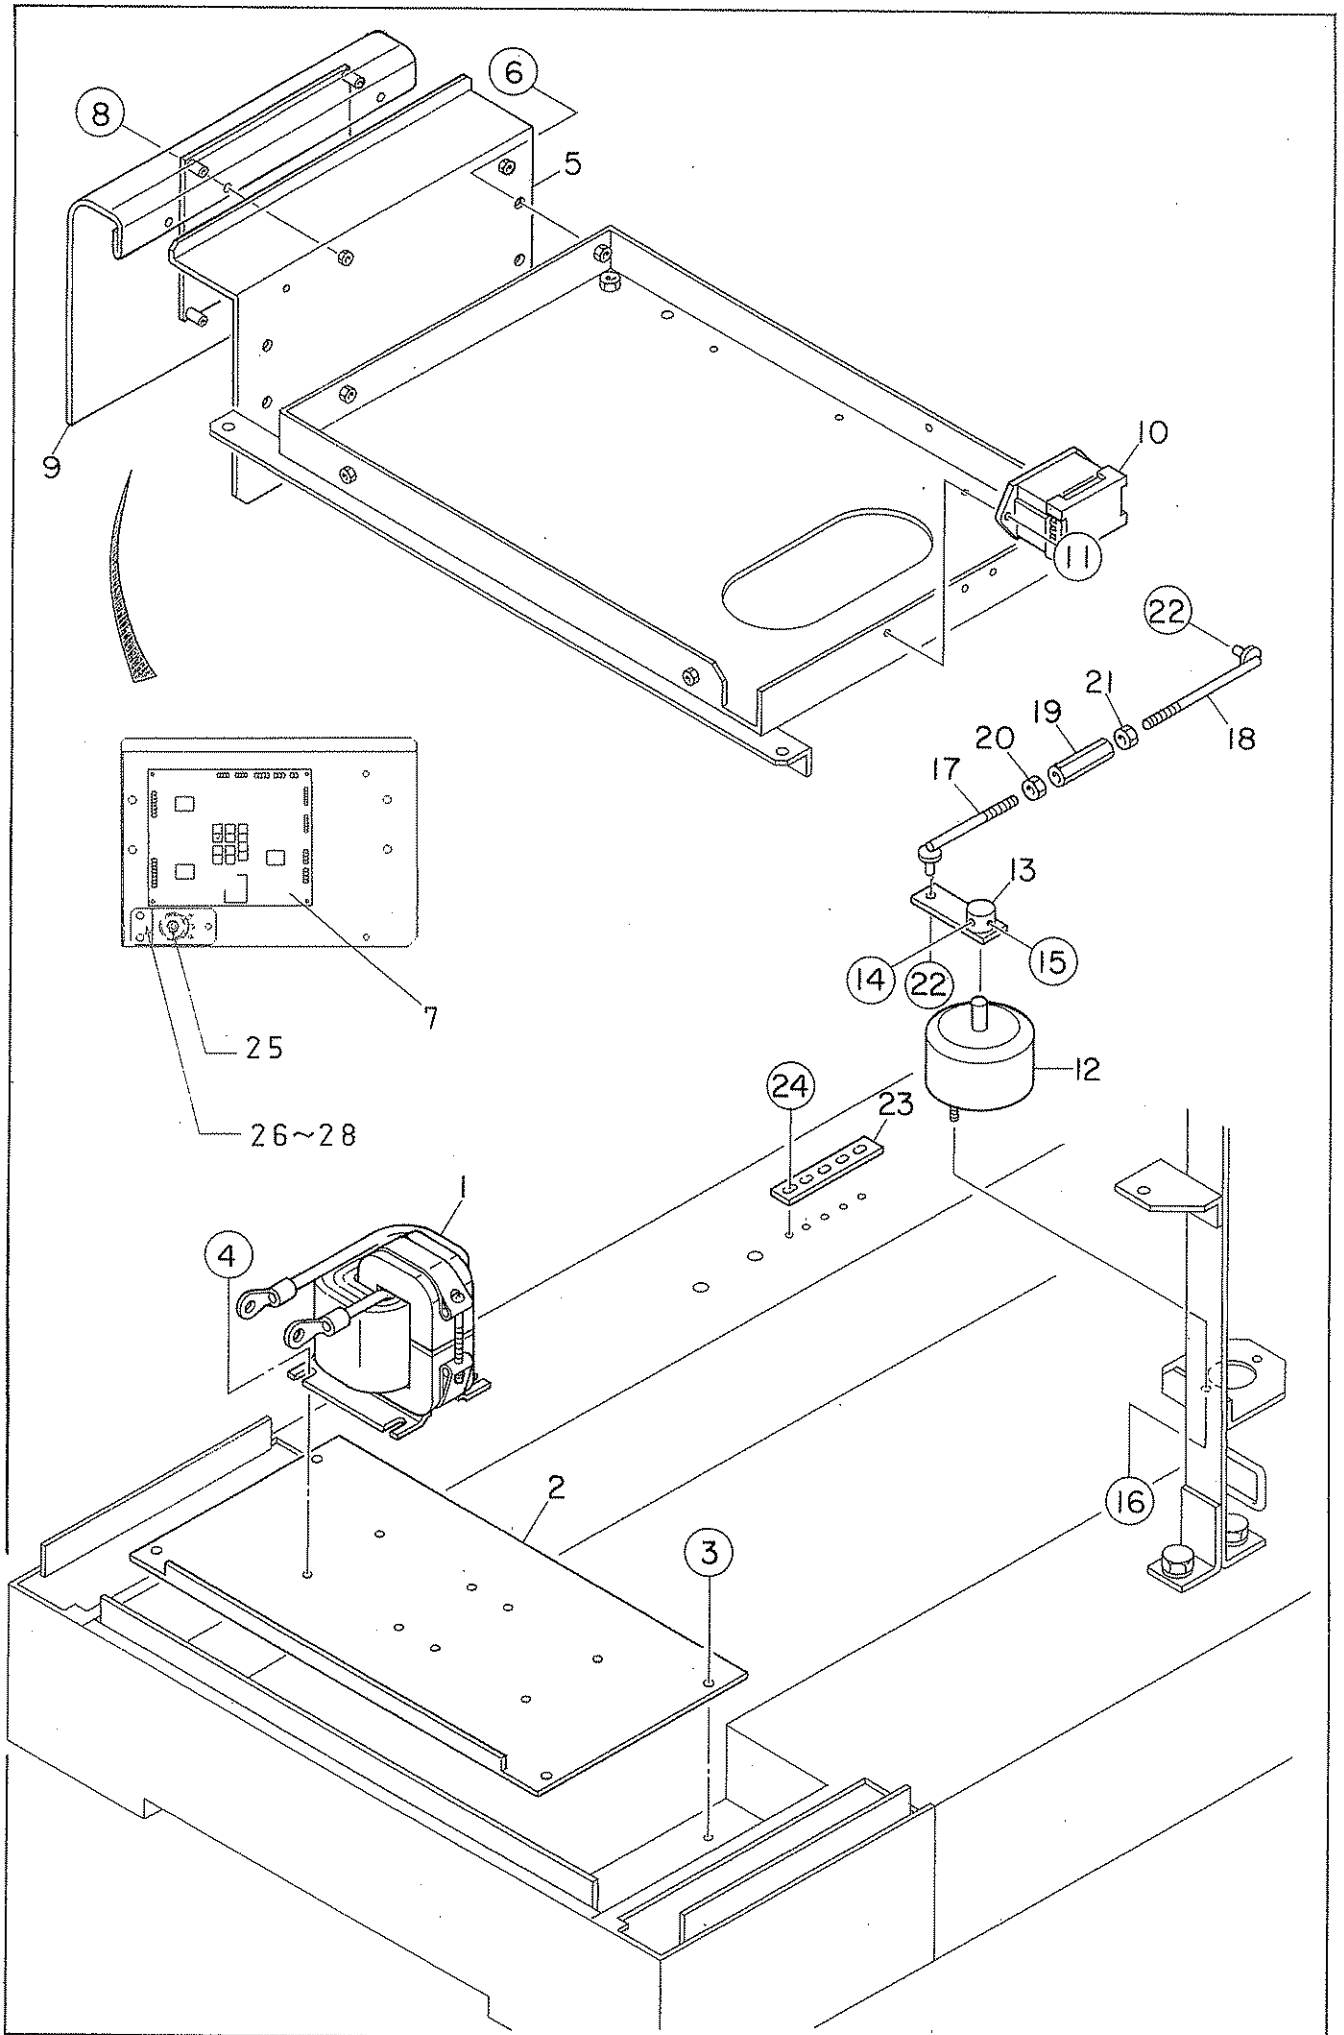 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 52645 00103	DC Reactor		2				LA, B	
2	D 52616 00304	Bracket, reactor		1					
	D 54940 00503	Lining		1					
3	Y 00169 06015	Hex. Head Bolt		4					
4	Y 00169 06015	Hex. Head Bolt		8					
5	D 52140 00203	Control Box		1					
6	Y 00169 06015	Hex. Head Bolt		4					
7	D 99248 00234	Control Unit	CV-13	1				IC	
8	Y 00271 03025	Machine Screw		4					
9	D 52617 00304	Cover, electric parts		1					
10	B 03525 00104	Fuse Box	FB-6PS	1					
	Y 06018 06642	Fuse	5A	(4)				F2~4	
	Y 06018 06643	Fuse	15A	(2)				F5	
	Y 06018 06644	Fuse	30A	(2)				F1	
	W 87006 25504	Decal:Fuse Box	S-4936	(1)					
11	Y 00169 05015	Hex. Head Bolt		2					
12	W 67226 35003	Rotary Solenoid Ass'y		1				S	
	W 17901 50203	Rotary Solenoid		(1)					
13	W 67226 31004	Arm, solenoid		(1)					
14	Y 00101 06020	Hex. Head Bolt		(1)					
	Y 00300 06000	Hex. Nut		(1)					
15	Y 00504 03020	Spring Pin		(1)					
16	Y 02070 06000	Hex. Nut		2					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
17	D 53553 00104	Governor Rod		1					
18	D 13563 00004	Governor Rod		1					
19	W 15521 54004	Screw Joint		1					
20	Y 00310 08000	Hex. Nut		1					
21	Y 00365 08000	Hex. Nut		1					
22	Y 00412 08000	Plain Washer		2					
	Y 06050 10503	Snap Pin	SSP-8	2					
23	W 85118 64604	Plate		1					
24	Y 00169 06015	Hex. Head Bolt		5					
25	Y 06018 40085	Rheostat	RV20N20SB 1K Ω	1			VR3		
26	D 52616 00804	Bracket		1					
27	Y 00169 06015	Hex. Head Bolt		2					
28	W 08018 83003	Insulator		1					

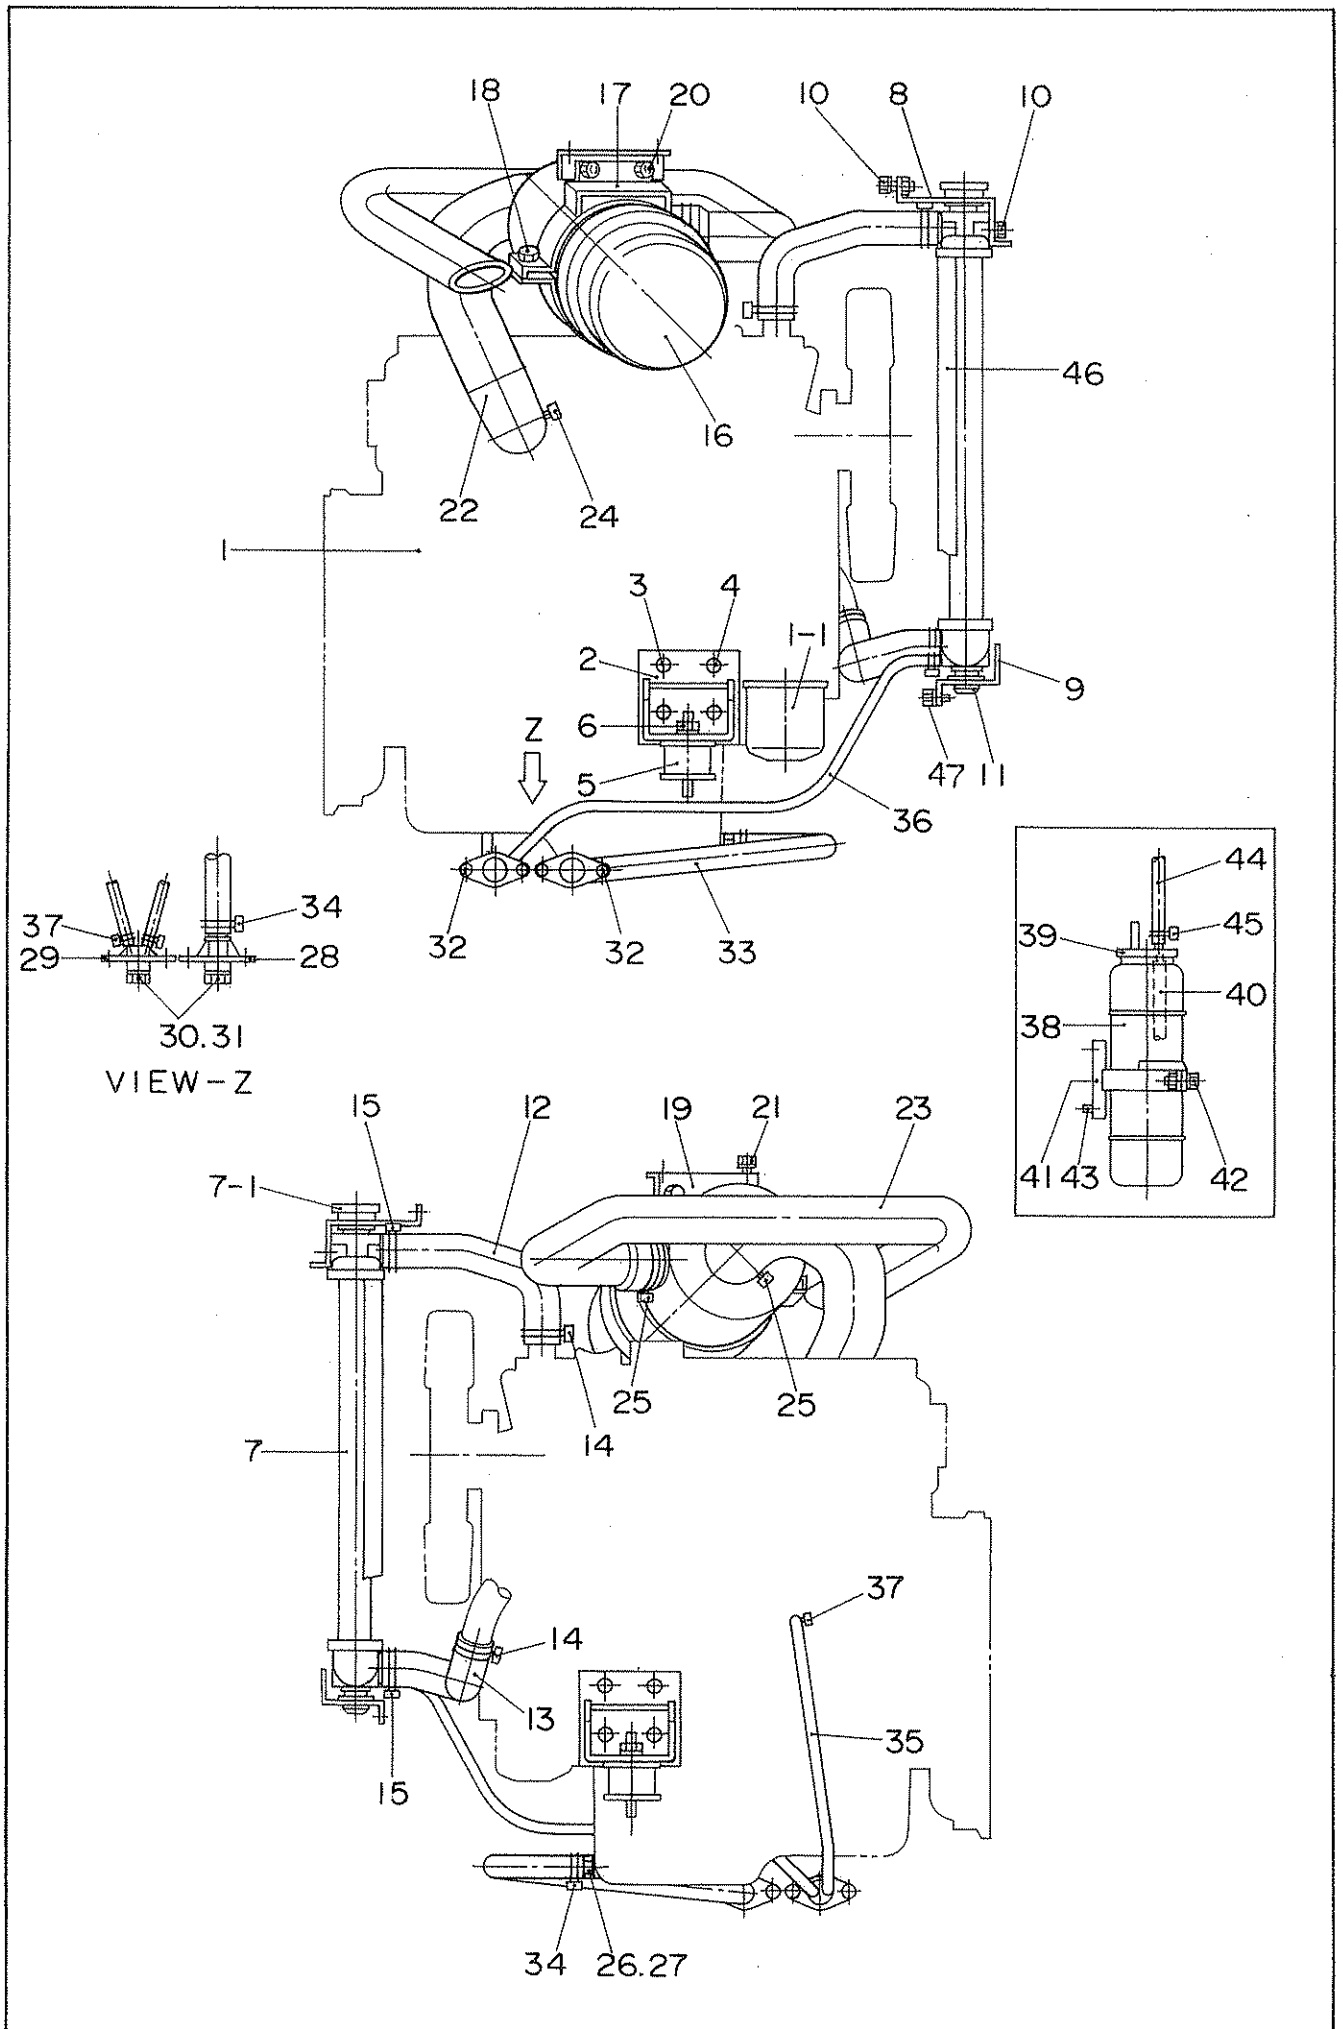 


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 69242 00034	Engine	KUBOTA V1505	1					
	Y 06020 11472	Fan Belt	KUBOTA 16282-97011	(1)					
1- 1	Y 06020 41174	Cartridge, oil filter	KUBOTA 16271-32093	(1)					
2	D 53042 00304	Engine Foot		2					
3	Y 00107 10020	Hex. Head Bolt		6					
4	Y 00107 10020	Hex. Head Bolt		2					
	Y 00424 10000	Plain Washer		2					
5	W 76054 19004	Rubber Suspension		2					
6	Y 02070 10000	Hex. Nut		2					
7	Y 06020 12793	Radiator	2951-349-0000	1					
7- 1	Y 06020 11079	Cap, radiator	6713-092-0901	(1)					
8	D 63111 00204	Bracket, radiator		1					
9	B 03111 00404	Bracket, radiator		1					
10	Y 00169 06015	Hex. Head Bolt		5					
11	B 13126 00004	Rubber Mount		2					
12	D 63115 00203	Radiator Hose		1					
13	D 43125 01003	Radiator Hose		1					
14	Y 06055 15112	Hose Band	∅ 37	2					
15	Y 06055 15134	Hose Band	HS16	2					
16	Y 06020 46531	Air Cleaner	EPG058505	1					
	Y 06020 46611	Element, air cleaner	P82-1575	(1)					
17	D 53742 00203	Band, air cleaner		1					
18	Y 00169 08025	Hex. Head Bolt		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
19	D 53742 00104	Bracket		1					
20	Y 00169 06016	Hex. Head Bolt		2					
21	Y 00173 06016	Hex. Head Bolt		2					
22	D 43751 01303	Hose, air cleaner		1					
23	D 13751 00613	Hose, air cleaner		1					
24	Y 06055 15139	Hose Band	HS32	1					
25	Y 06055 15027	Hose Band	φ 65	2					
26	W 79620 54004	Drain Joint, oil		1					
27	Y 06020 21191	Packing	SW-12	1					
28	W 15020 25103	Drain Joint, oil		1					
29	W 16220 14103	Drain Joint, water		1					
30	W 08020 11104	Plug		2					
31	Y 01500 00018	O Ring	A P18	2					
32	Y 00169 06015	Hex. Head Bolt		4					
33	D 53211 00003	Drain Hose		1					
34	Y 06055 15132	Hose Band	HS-8	2					
35	Y 01999 01000	Drain Hose		1					
36	Y 01999 00770	Drain Hose		1					
37	Y 06055 15094	Hose Band	φ 12	4					
38	W 08020 81403	Reserve Tank		1					
39	W 08020 81104	Cap, reserve tank		1					
40	Y 01991 00215	Hose		1					
41	W 87020 82004	Bracket, reserve tank		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
42	Y 00169 06015	Hex. Head Bolt		1					
43	Y 00169 06015	Hex. Head Bolt		2					
44	Y 01999 00460	Hose		1					
45	Y 06055 15094	Hose Band	φ 12	2					
46	Y 02203 00400	Rubber Seal		2					
47	Y 00169 08020	Hex. Head Bolt		3					

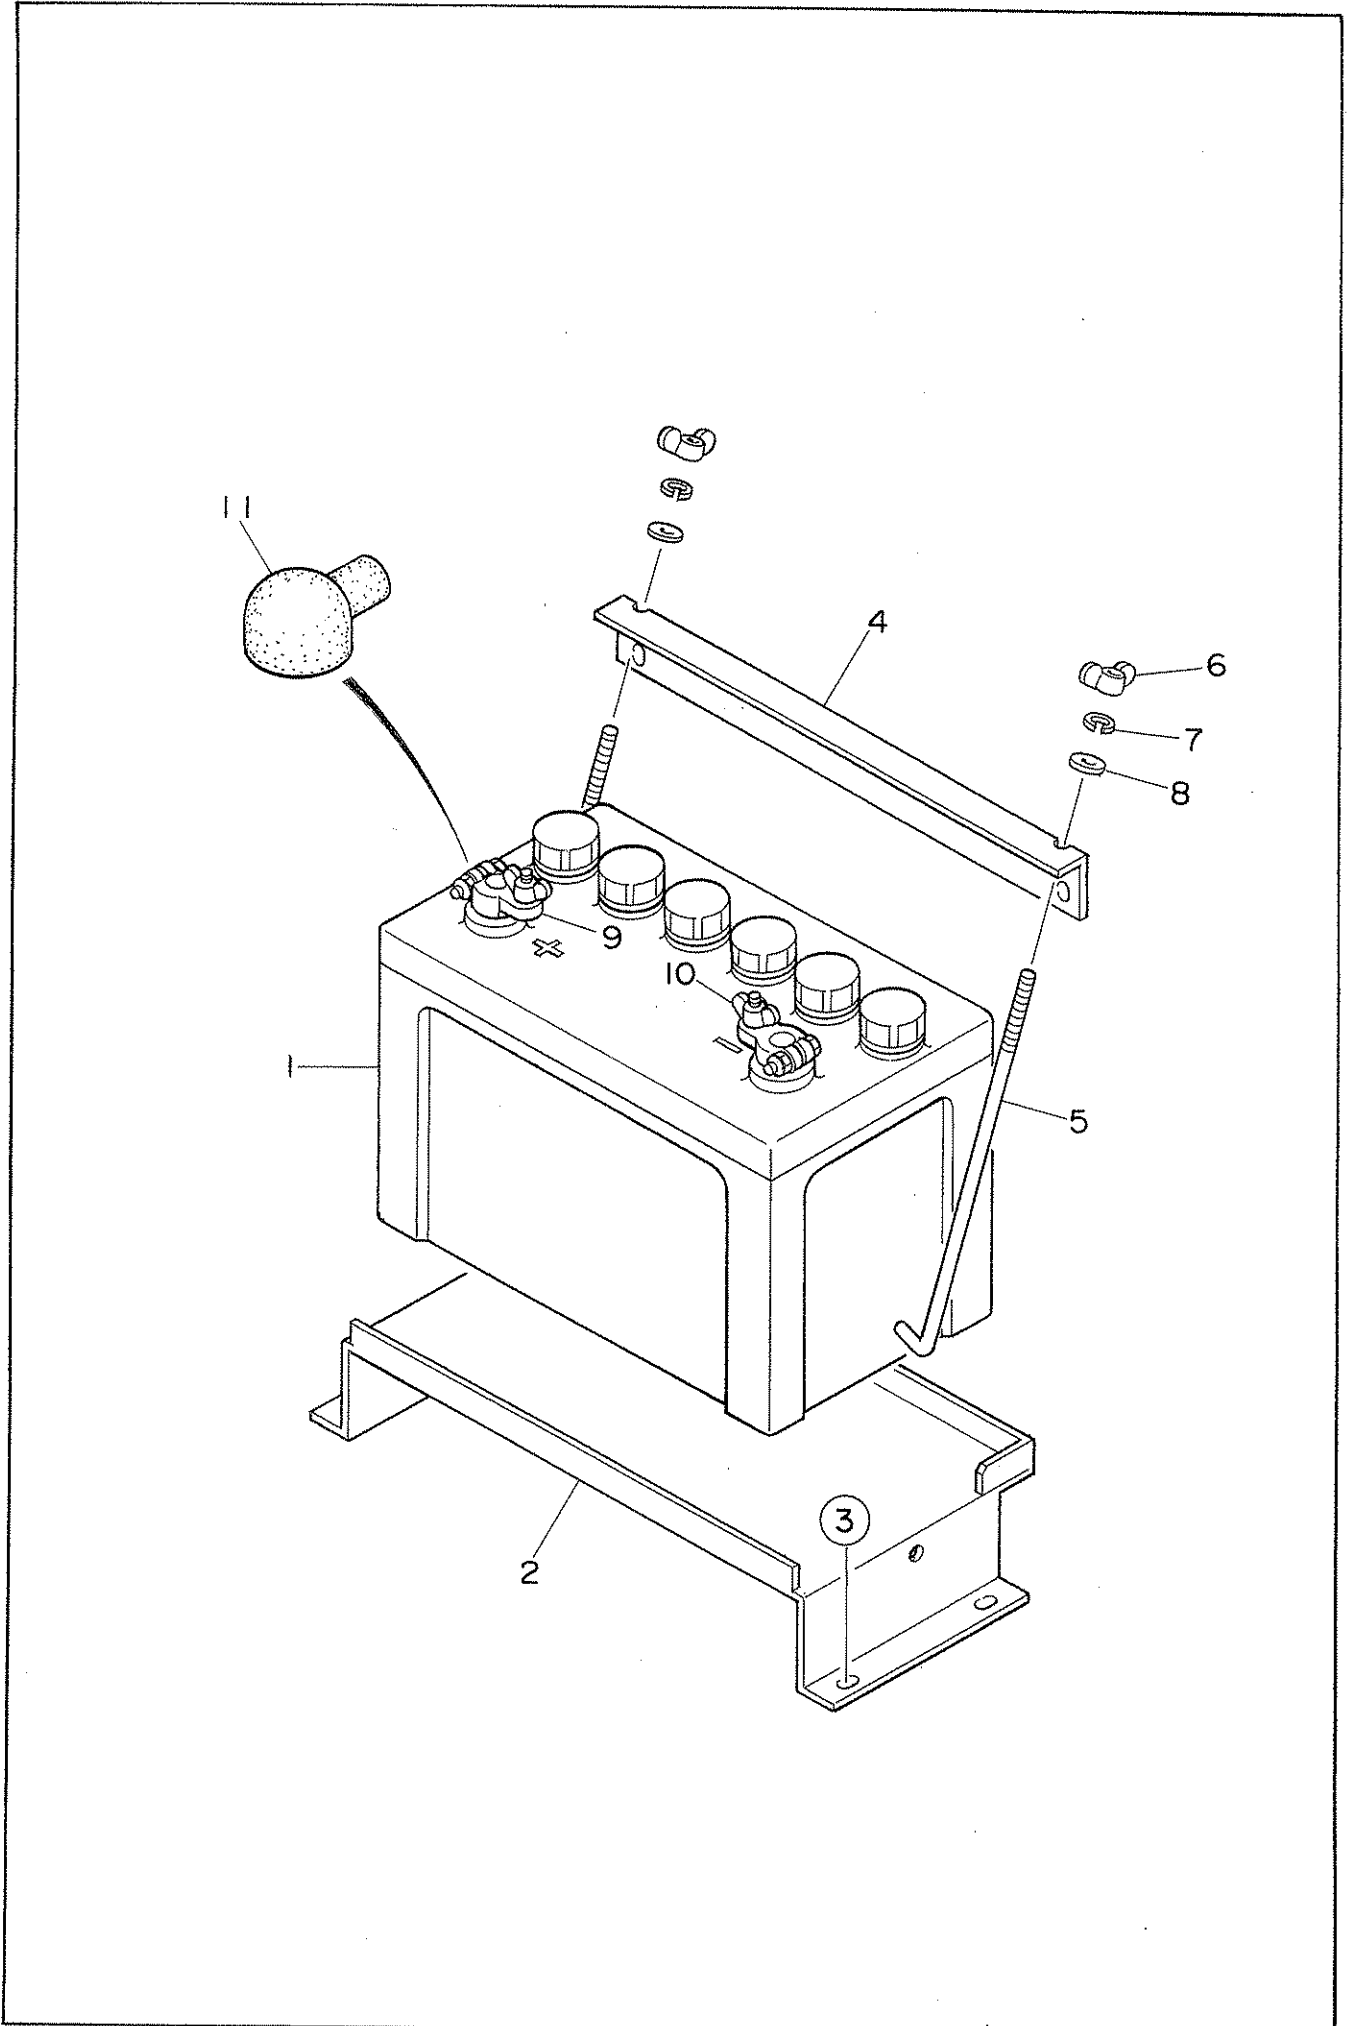 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 01653 08026	Battery	80D26R	1					
2	D 53442 00104	Battery Frame		1					
3	Y 00169 06015	Hex. Head Bolt		4					
4	B 13452 00114	Battery Band		1					
5	W 08050 02904	Battery Bolt		2					
6	Y 00378 08000	Wing Nut		2					
7	Y 00400 08000	Spring Washer		2					
8	Y 00412 08000	Plain Washer		2					
9	Y 06022 20310	Terminal Ass'y	No. 9P	1					
10	Y 06022 20311	Terminal Ass'y	No. 9N	1					
11	W 08450 40414	Terminal Cap		1					

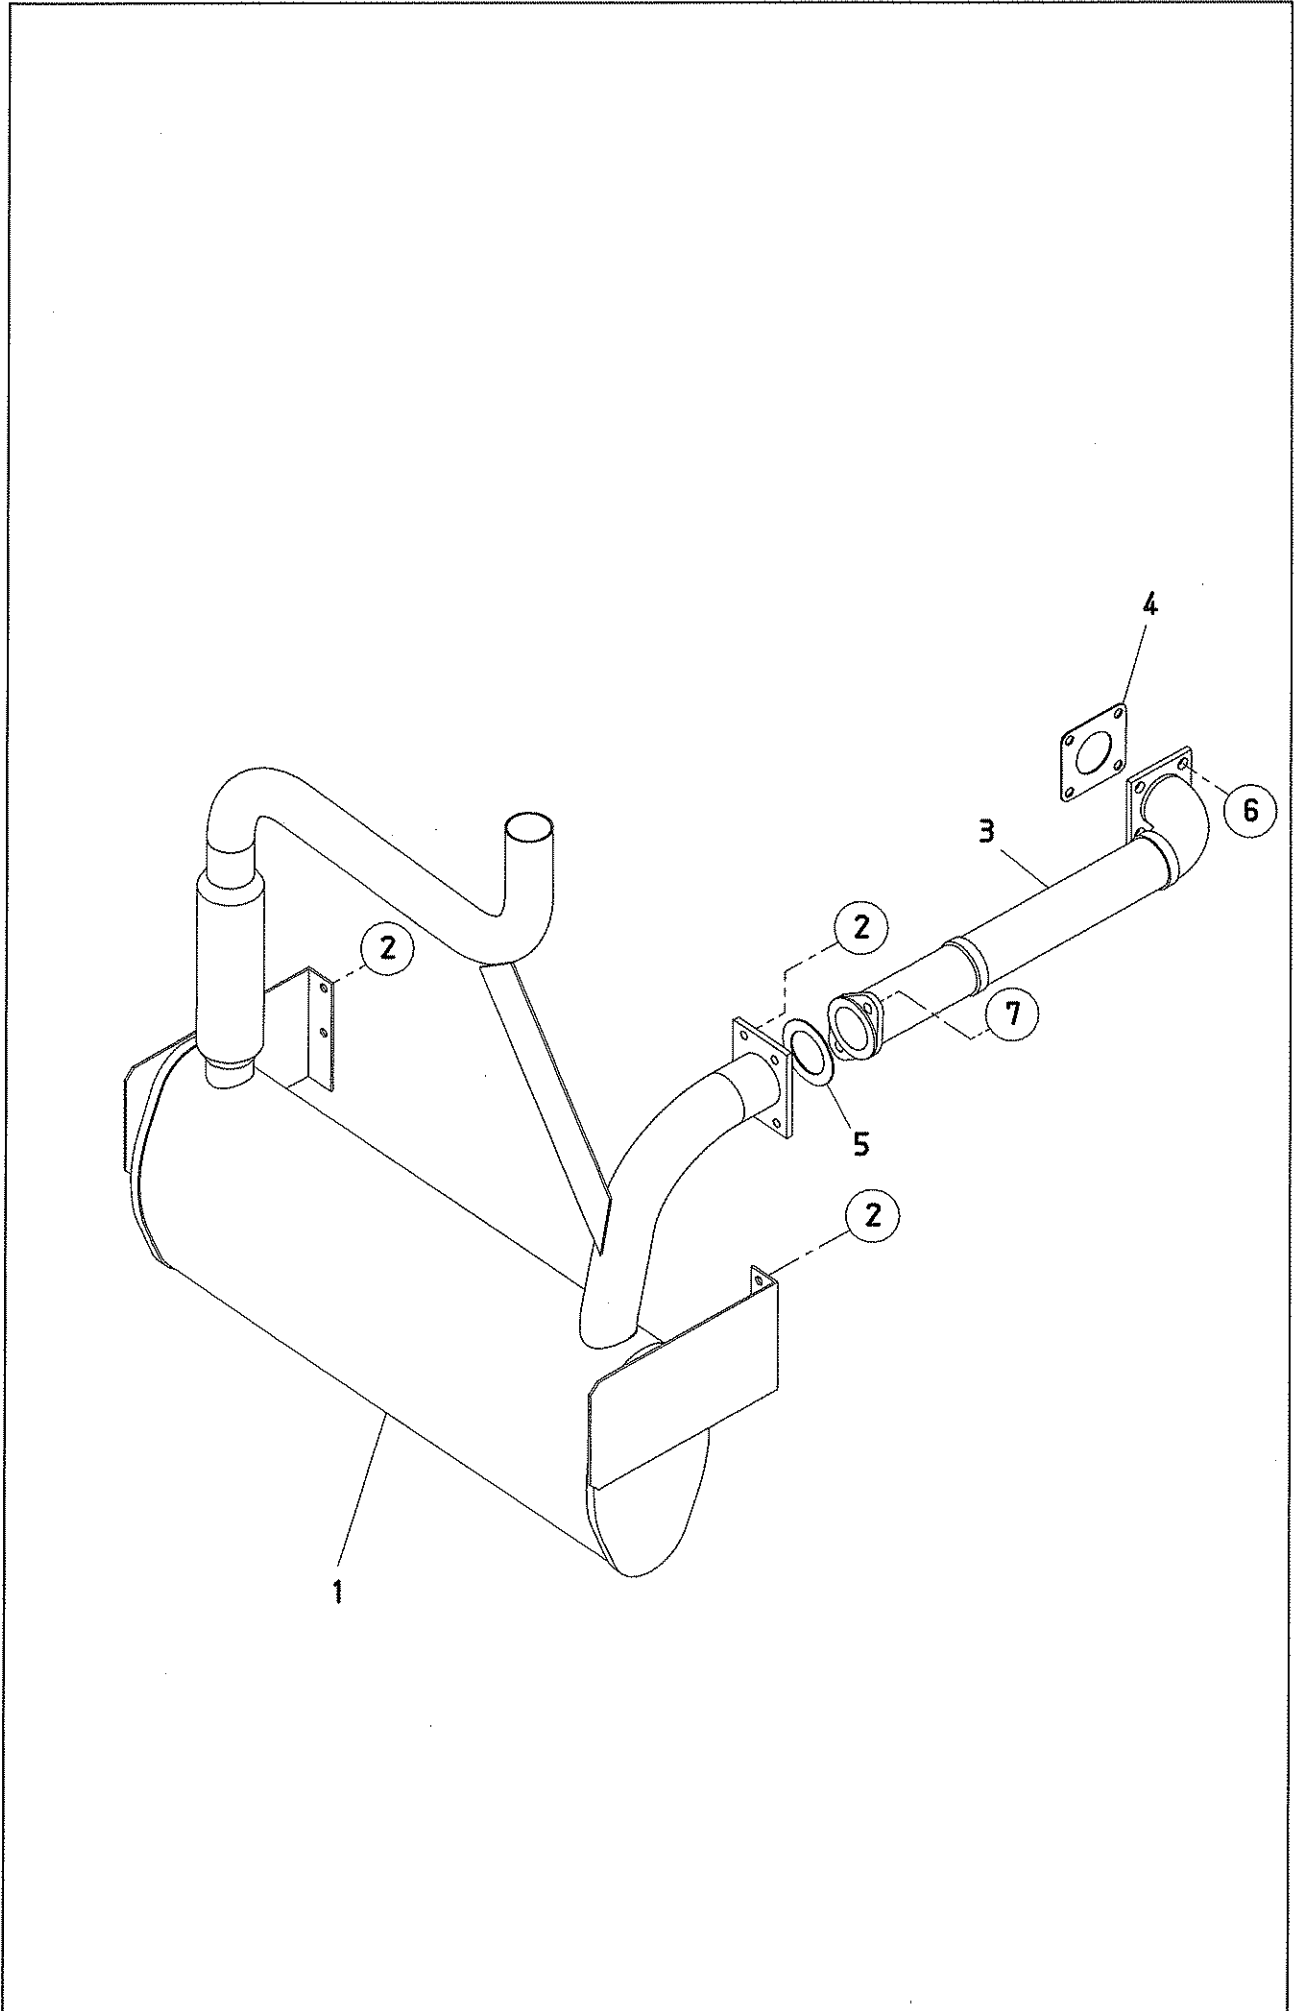 


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 63311 00203	Muffler		1					
2	Y 00169 08020	Hex. Head Bolt		6					
3	D 53340 00103	Exhaust Pipe		1					
4	Y 06023 20153	Gasket	KUBOTA 15263-12371	1					
5	D 93040 00004	Gasket		1					
6	Y 02070 08000	Hex. Nut		4					
7	Y 00169 08030	Hex. Head Bolt		2					

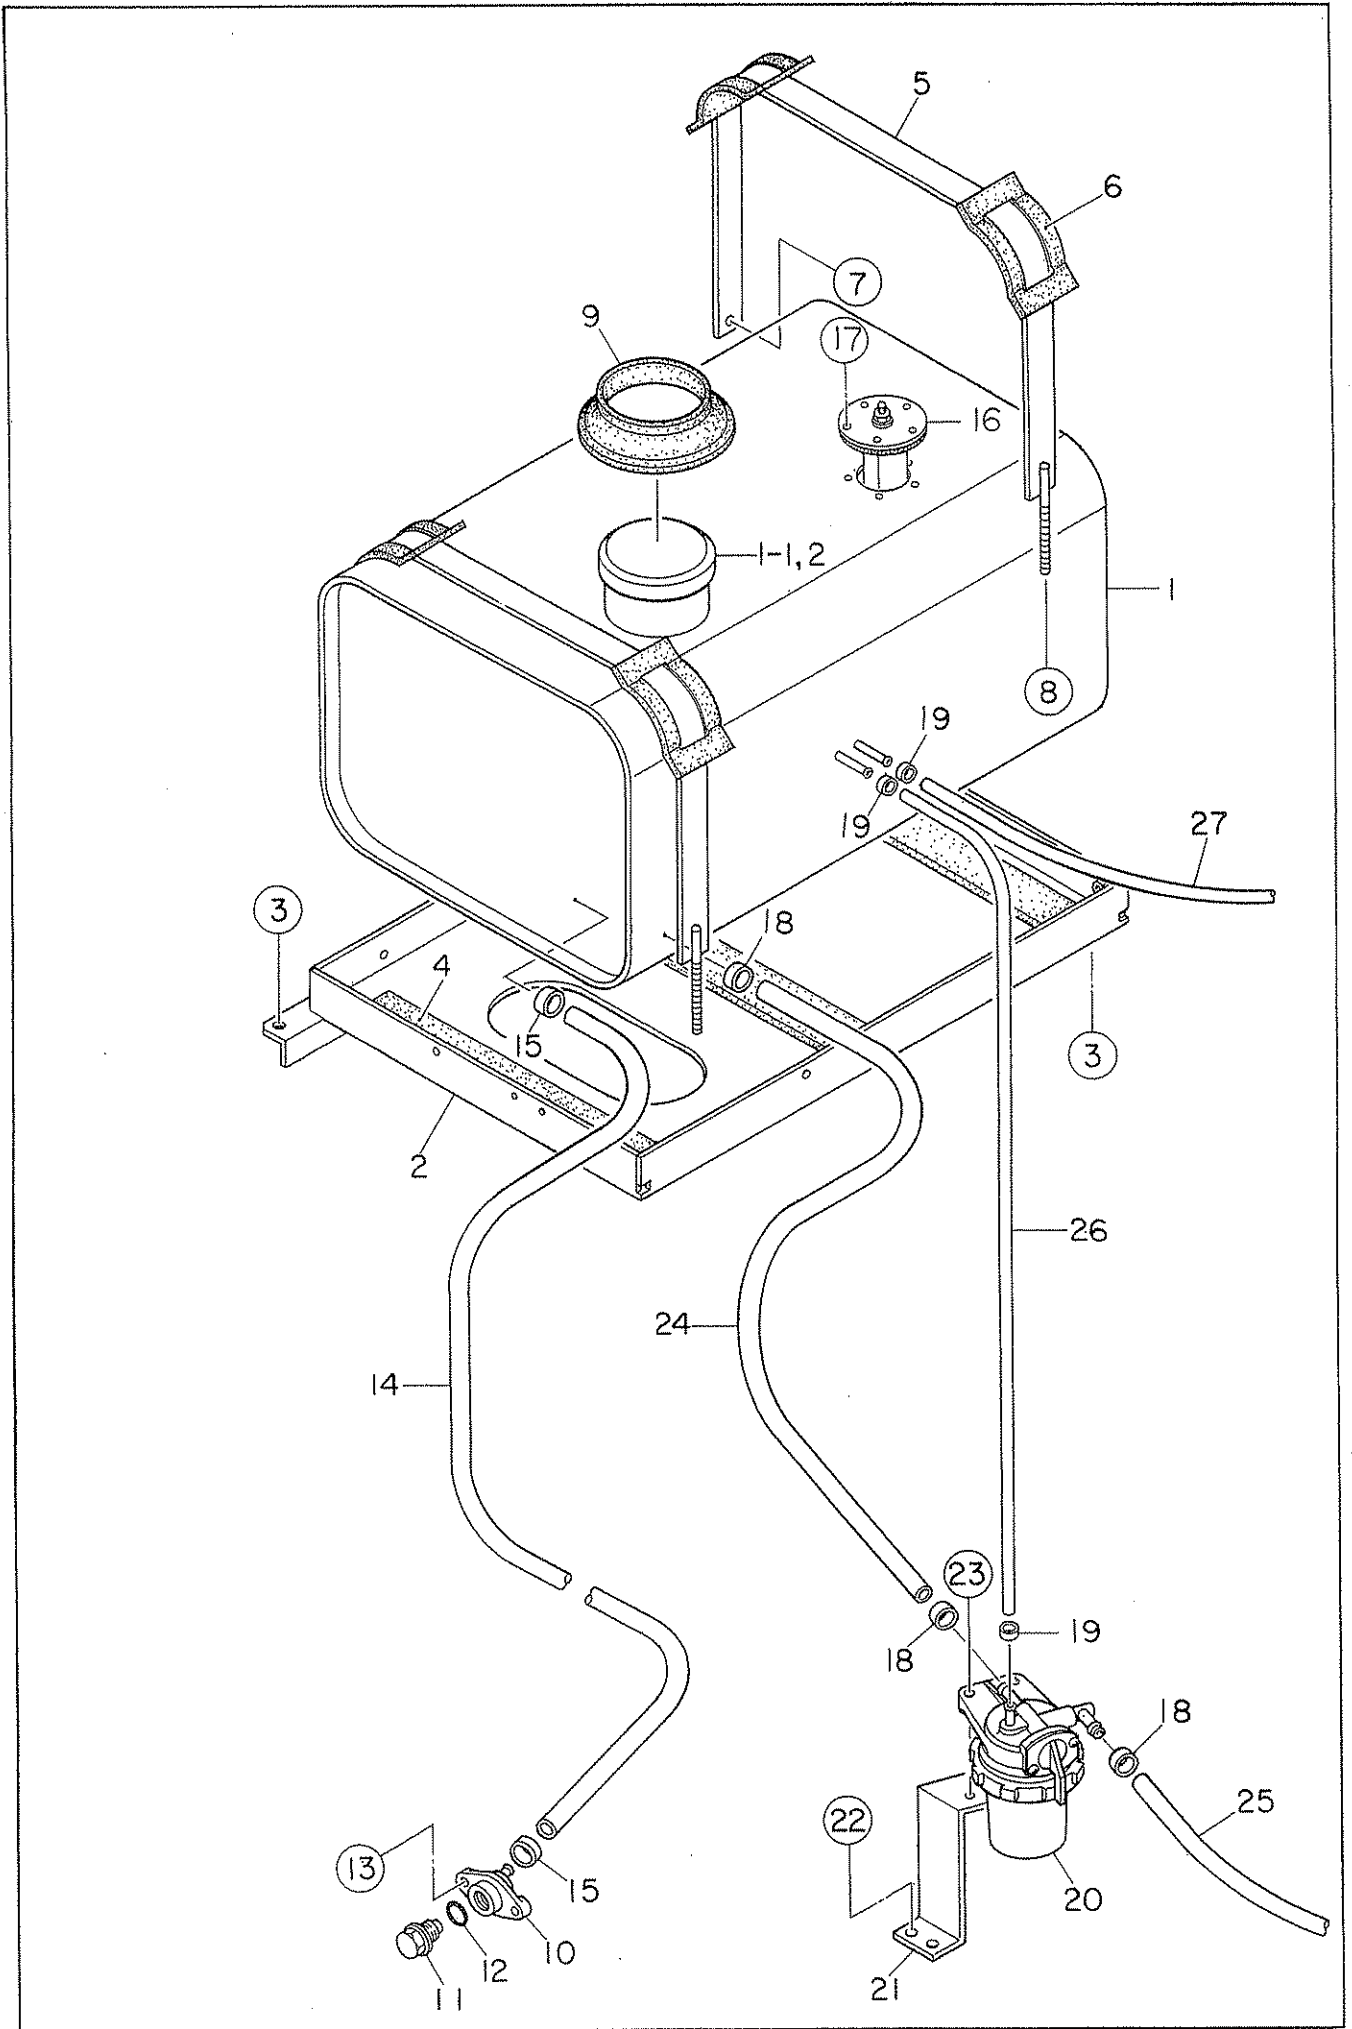 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 63640 00203	Fuel Tank		1					
1- 1	W 08101 05800	Cap, fuel tank		(1)					
1- 2	W 08101 05900	Fuel Filter		(1)					
2	D 64340 00003	Bracket, fuel tank		1					
3	Y 00169 08020	Hex. Head Bolt		4					
4	Y 02233 00330	Tank Sheet		3					
5	D 63642 00004	Tank Band		2					
6	D 63653 00504	Pad, tank band		4					
7	Y 00169 08015	Hex. Head Bolt		2					
8	Y 00379 08000	Hex. Nut		2					
9	B 93124 00004	Rubber Seal		1					
10	W 78120 14003	Drain Joint		1					
11	W 08020 11104	Plug		1					
12	Y 01500 00018	O Ring	AP18	1					
13	Y 00169 06015	Hex. Head Bolt		2					
14	Y 01999 00850	Drain Hose		1					
15	Y 06055 15094	Hose Band	φ 12	2					
16	E 29243 00244	Sender, fuel gauge	I-208	1					
	E 19243 00184	Gasket		1					
17	Y 00229 05015	Machine Screw		5					
18	Y 06055 15094	Hose Band	φ 12	4					
19	Y 06055 15093	Hose Band	φ 9	4					
20	Y 06020 42463	Fuel Filter	KUBOTA 15521-43017	1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	Y 06020 42174	Element, fuel filter	KUBOTA 15521-43161	(1)					
21	D 43687 00604	Bracket, fuel filter		1					
22	Y 00169 06015	Hex. Head Bolt		2					
23	Y 00169 08025	Hex. Head Bolt		2					
24	Y 01999 00420	Suction Hose		1					
25	Y 01999 00750	Suction Hose		1					
26	Y 01997 00550	Return Hose		1					
27	Y 01997 00210	Return Hose		1					

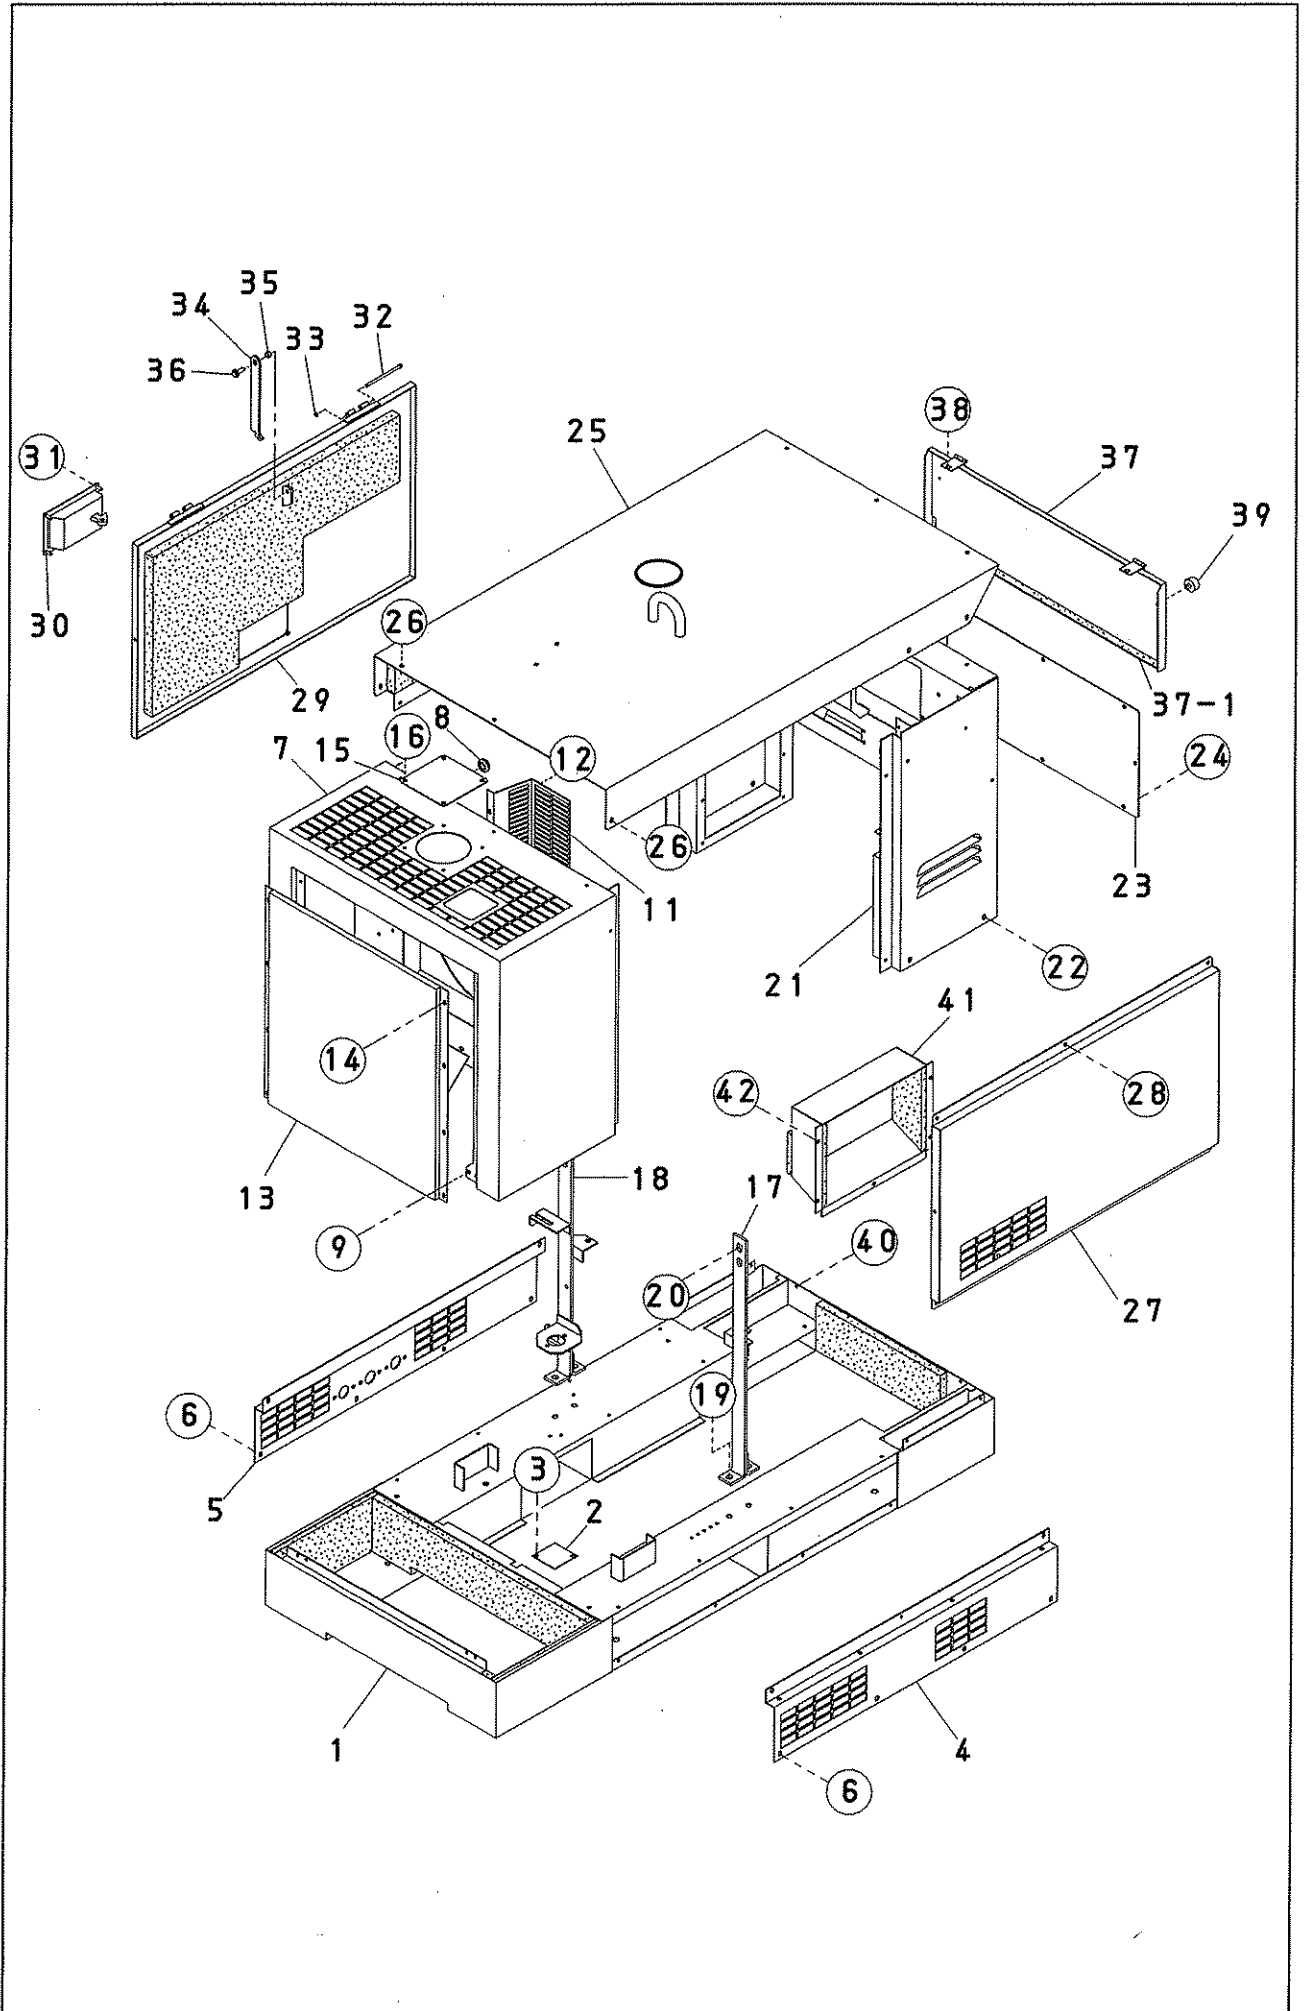 


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 64140 00202	Base		1					
	D 54940 00503	Lining		1					
2	D 34148 00104	Floor Panel		1					
3	Y 00169 06015	Hex. Head Bolt		2					
4	D 64143 00103	Splasher Panel		1					
5	D 64143 00003	Splasher Panel		1					
6	Y 00169 06015	Hex. Head Bolt		18					
7	D 64240 00302	Front Frame		1					
	D 64941 00203	Lining		1					
8	Y 06018 50239	Grommet	C-30-BW-14-2	1					
9	Y 00169 06015	Hex. Head Bolt		2					
11	D 63112 00103	Fan Guard		1					
12	Y 00169 06015	Hex. Head Bolt		2					
13	D 54242 00403	Cover, front frame		1					
	D 54941 00404	Lining		1					
14	Y 00169 06015	Hex. Head Bolt		8					
15	D 44252 00804	Cover, radiator cap		1					
16	Y 00169 06015	Hex. Head Bolt		4					
17	D 64343 00303	Hanger		1					
18	D 64343 00203	Hanger		1					
19	Y 00123 12030	Hex. Head Bolt		4					
20	Y 00123 12030	Hex. Head Bolt		4					
21	D 64440 00602	Rear Frame		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	D 64943 00304	Lining		1					
22	Y 00169 06015	Hex. Head Bolt		4					
23	D 64443 00304	Cover, rear frame		1					
24	Y 00169 06015	Hex. Head Bolt		6					
25	D 64640 00302	Roof Panel		1					
	D 54945 00304	Lining		1					
26	Y 00169 06015	Hex. Head Bolt		12					
27	D 64541 00003	Side Panel		1					
	D 64944 00304	Lining		1					
28	Y 00169 06015	Hex. Head Bolt		6					
29	D 54540 00803	Side Door		1					
	D 54944 00604	Lining		1					
30	Y 06050 10239	Door Handle	A-838-A-1D	1					
	Y 06018 50519	Key	R200	(1)					
31	Y 02070 06000	Hex. Nut		4					
32	W 08100 14704	Pin		2					
33	Y 00802 00004	Snap Ring		2					
34	W 78351 86014	Door Stay		1					
35	W 78350 88004	Collar		1					
36	Y 00169 08030	Hex. Head Bolt		1					
37	D 64442 00203	Rear Door		1					
37- 1	Y 02269 00720	Rubber Seal		1					
38	Y 00169 06015	Hex. Head Bolt		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
39	Y 06018 51613	Stopper	CP-30-FF-15A	2					
40	Y 00169 08020	Hex. Head Bolt		2					
41	D 64543 00003	Duct		1					
	D 64944 00404	Lining		1					
42	Y 02070 06000	Hex. Nut		5					

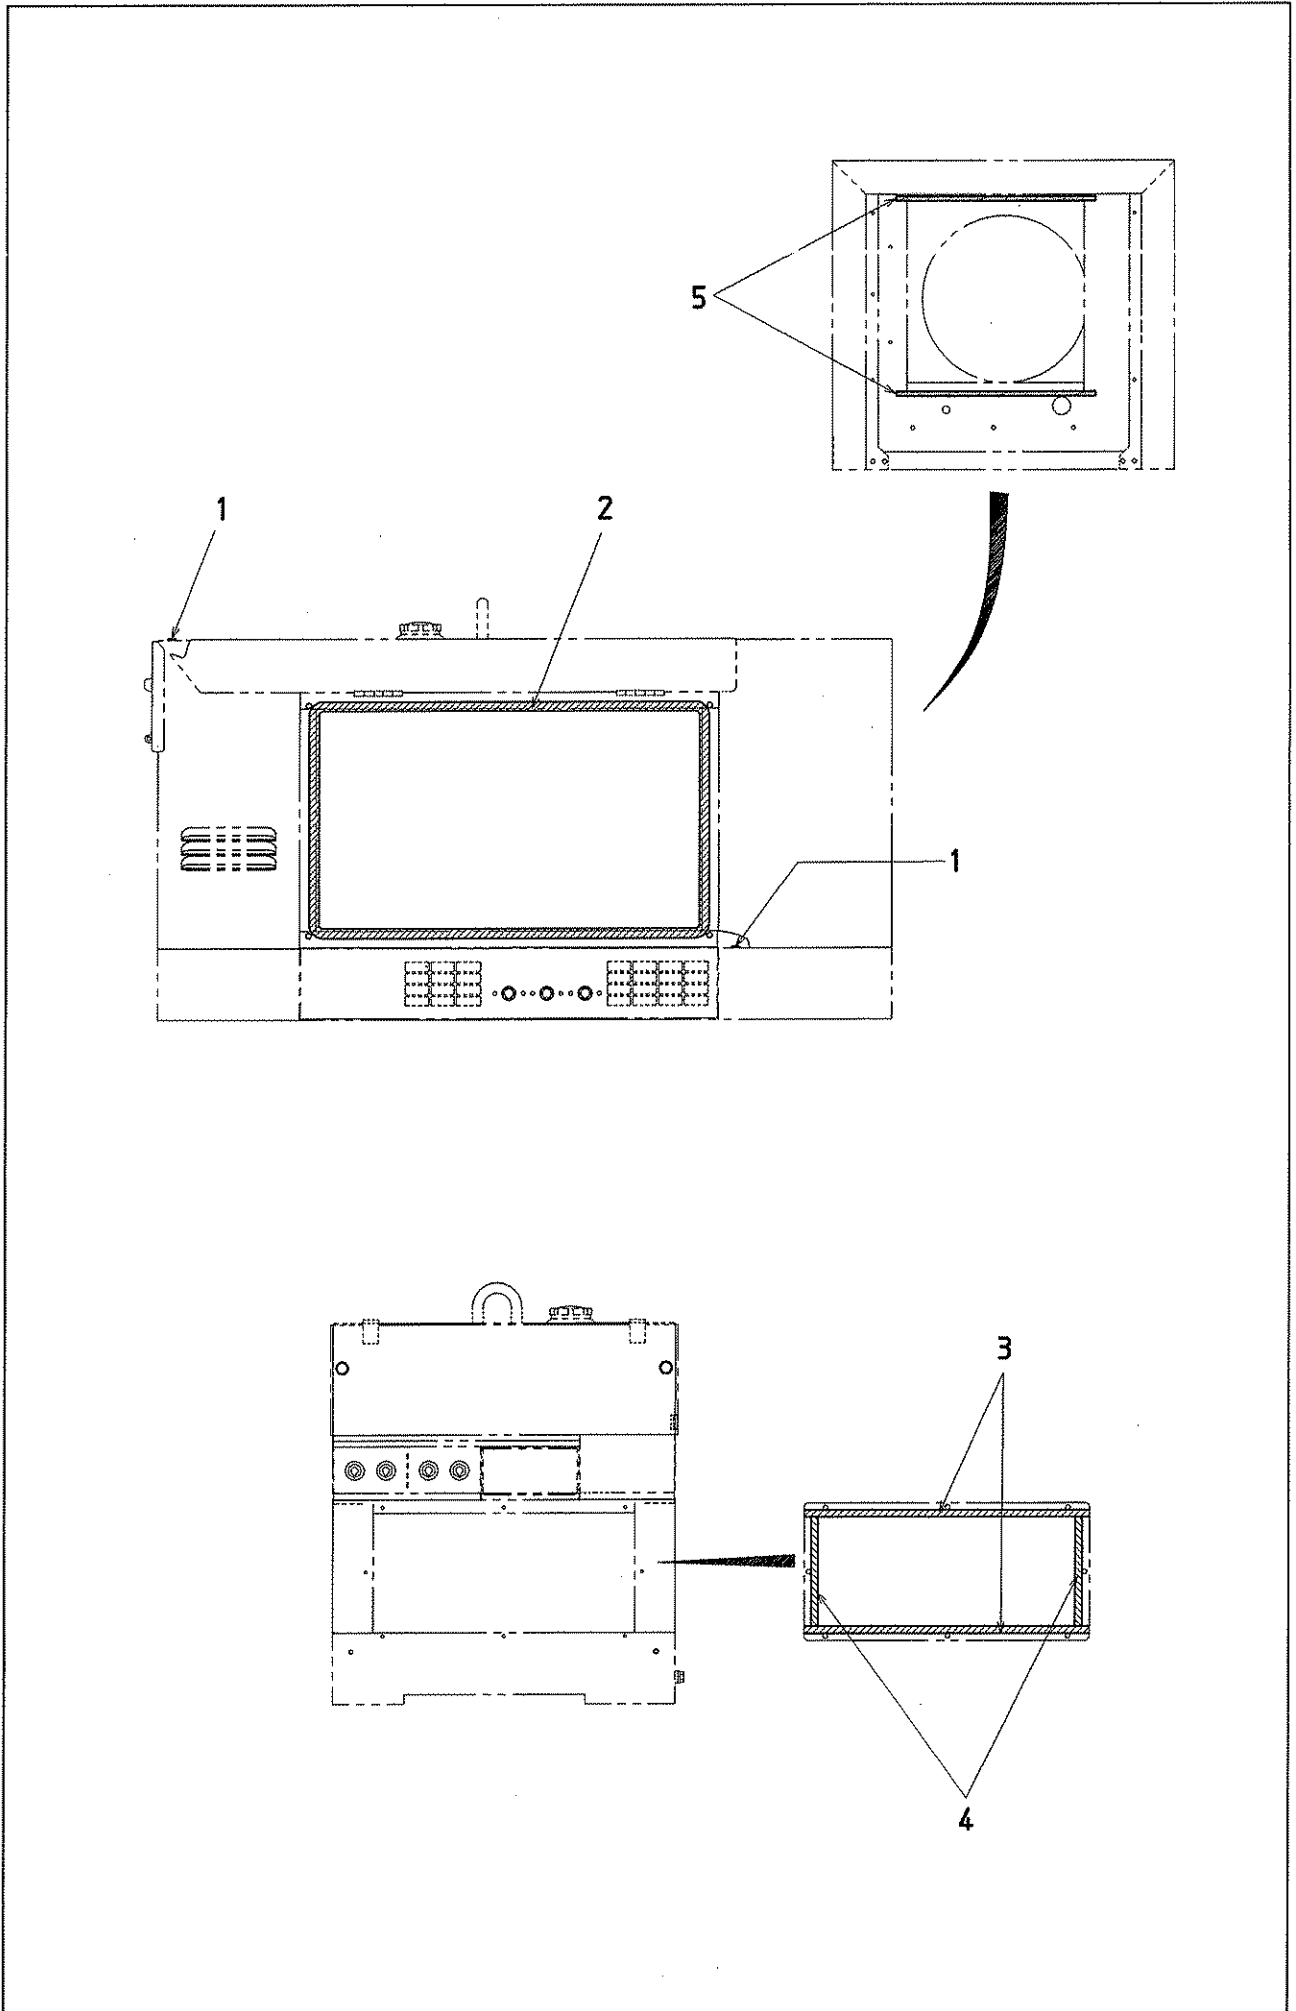 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 03149 00715	Rubber Seal		2					
2	Y 03146 02550	Rubber Seal		1					
3	Y 03149 00600	Rubber Seal		2					
4	Y 03149 00230	Rubber Seal		2					
5	Y 03179 00420	Rubber Seal		2					

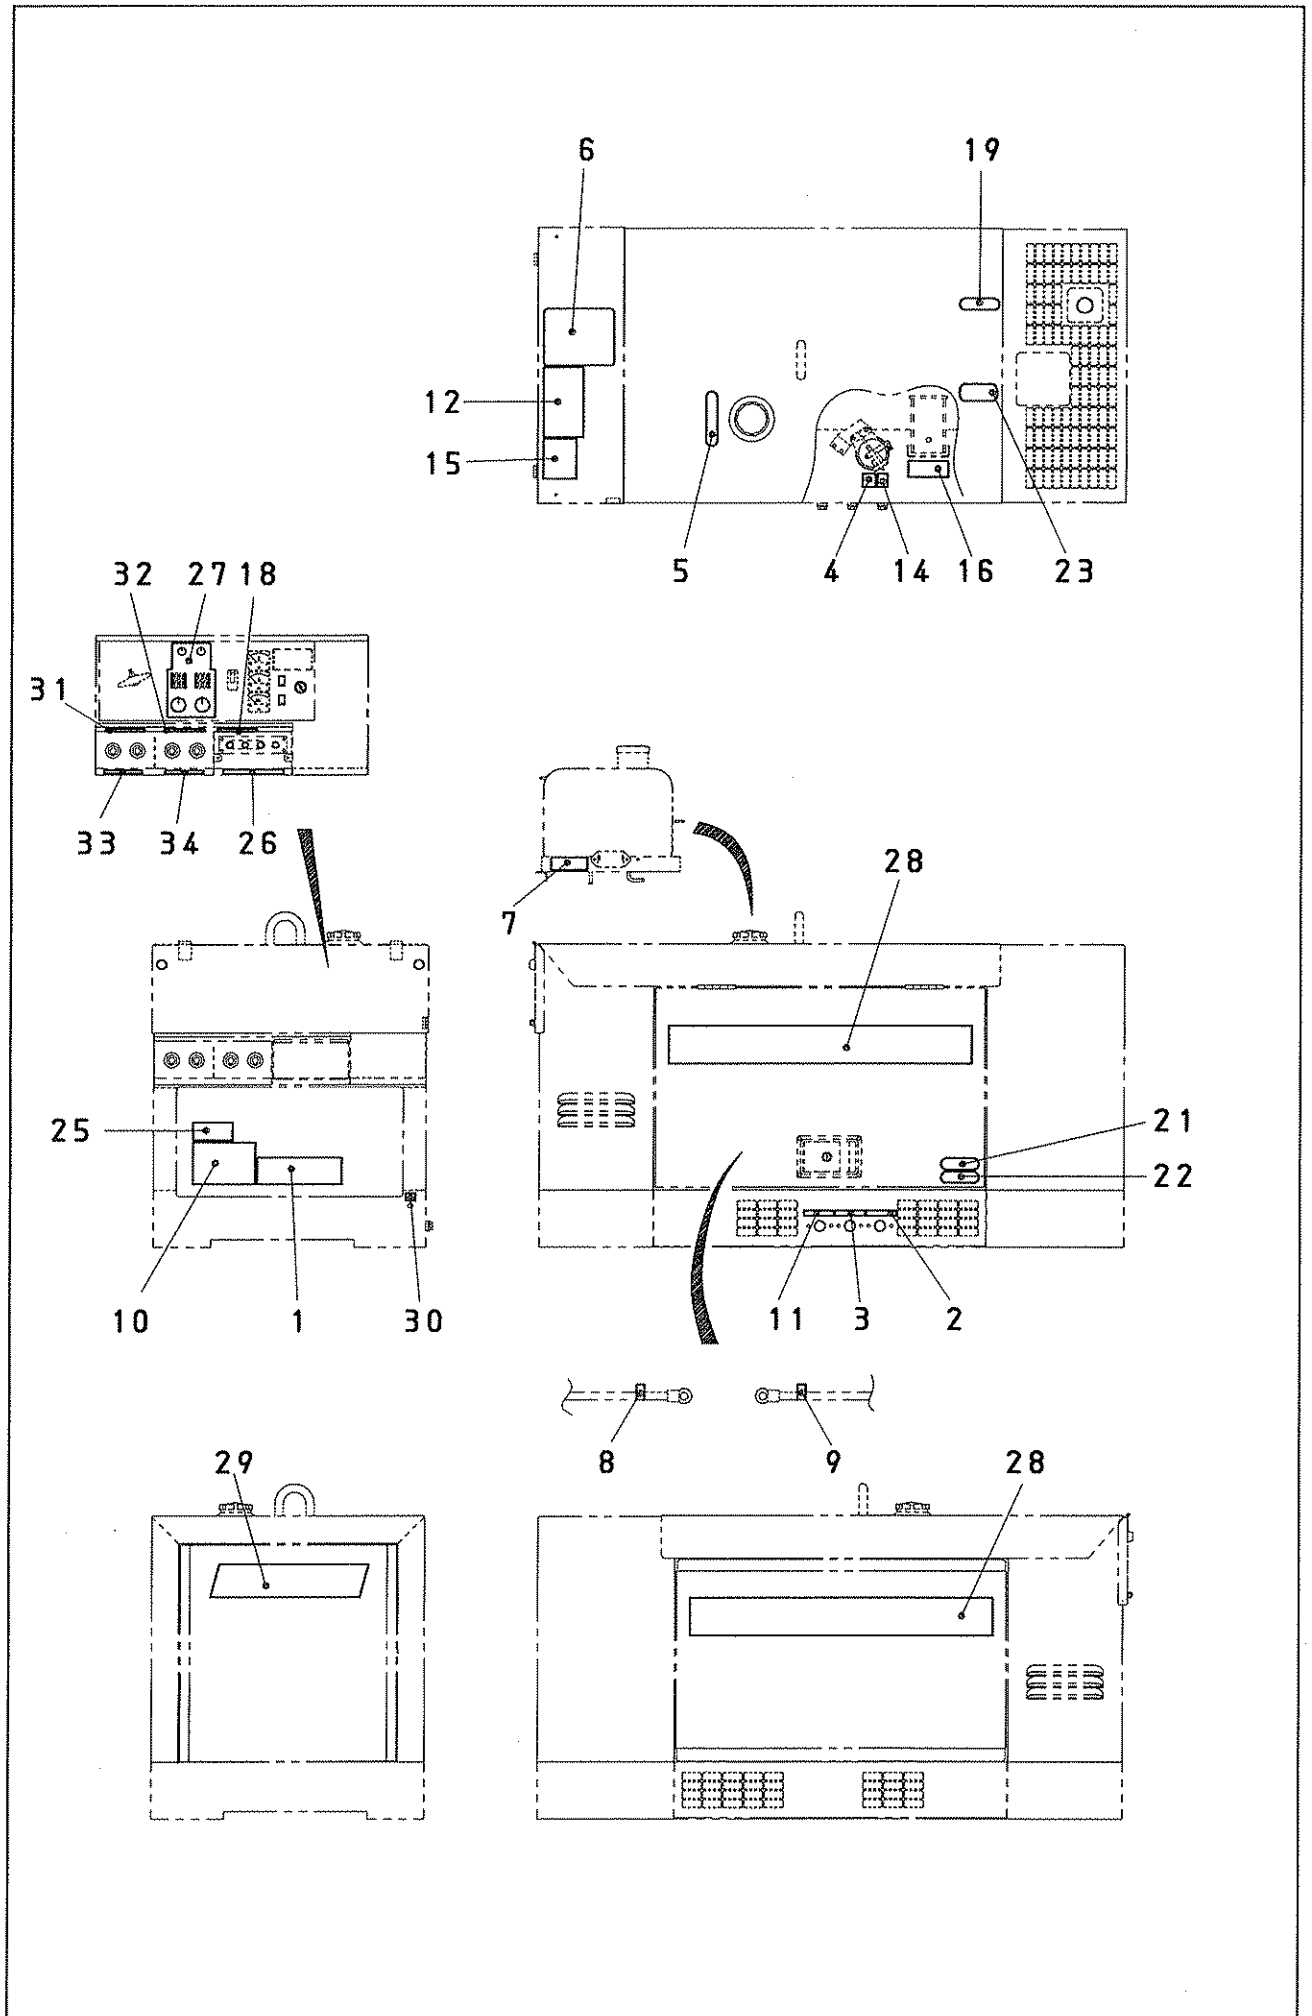 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
		A= 50Hz/380V							
		B= 50Hz/400V							
		C= 50Hz/415V							
1	D 65311 00403	Decal:Specification	D6311 0040		1				
		Decal:Specification				1			
		Decal:Specification					1		
2	W 16306 45004	Decal:Oil Drain	S-1403	1					
3	W 16306 47004	Decal:Coolant Drain	S-1404	1					
4	W 16306 10404	Decal:Caution	S-1406	1					
5	B 95055 00704	Decal:Diesel Fuel	B9055 0070A	1					
6	D 65510 00203	Decal:Caution	D6510 0020	1					
7	W 08206 50604	Decal: Danger Explosive Gases		1					
8	W 08006 89404	Decal:+	S-2090	1					
9	W 08006 89504	Decal:-	S-2091	1					
10	D 45520 04503	Decal:Important "Check Daily"	D4520 0450	1					
11	W 78106 80104	Decal:Fuel Drain	S-3060	1					
12	D 45520 04603	Decal:Warning	D4520 0460	1					
14	W 19806 80004	Decal:Fuel Cock	S-3704	1					
15	D 95121 00404	Decal:Safety instructions	D9121 0040A	1					
16	B 95050 00304	Decal:Caution	B9050 0030	1					
18	D 95221 00304	Decal: Danger High Voltage	D9221 0030	1					
19	D 95022 00004	Decal:Warning	D9022 0000	1					
21	B 95052 00204	Decal:Caution Hot Parts	B9052 0020	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
22	B 95050 00504	Decal:Warning Moving Parts	B9050 0050	1					
23	B 95051 00304	Decal:Warning Hot Coolant	B9051 0030	1					
25	B 95111 00304	Decal:Warning	B9111 0030	1					
26	W 85006 11104	Decal:3-Phase Output Terminal	S-4780		1				
	W 85006 11004	Decal:3-Phase Output Terminal	S-4736			1			
	W 85006 11404	Decal:3-Phase Output Terminal	S-4791				1		
27	D 55510 02402	Decal:Control Panel		1					
28	D 65610 00003	Decal:Model Name		2					
29	E 95112 01203	Decal:Denyo		1					
30	W 08406 23704	Decal:Ground for Bonnet	S-2954	1					
31	D 55510 02104	Decal:Welding Output Terminal	D5510 0210	1					
32	D 55510 02204	Decal:Welding Output Terminal	D5510 0220	1					
33	D 55510 01904	Decal:Welding Output Terminal	D5510 0190	1					
34	D 55510 02004	Decal:Welding Output Terminal	D5510 0200	1					